



# User Manual

## Three-phase Hybrid Inverter XD5-12KTR



**深圳市英威腾光伏科技有限公司**  
INVT Solar Technology (Shenzhen) Co., Ltd

## Contents

Chapter 1 Introduction.....	1
Chapter 2 Safety Precautions.....	2
2.1 Safety Symbols.....	2
2.2 Precautions for Operation.....	2
Chapter 3 Product Introduction.....	4
3.1 Intended User.....	4
3.2 Product Overview.....	4
3.3 Safety Instructions.....	6
3.4 Schematic Diagram of the Basic System.....	7
3.5 Product Features.....	7
Chapter 4 Installation.....	9
4.1 Unpacking Inspection.....	9
4.2 Before Installation.....	10
4.3 Space Requirements.....	12
4.4 Dimension of Mounting Bracket.....	13
4.5 Product Dimension and Weight.....	13
4.6 Wall Mounting.....	14
4.7 Installation of Inverter.....	15
Chapter 5 Electrical Connection.....	17
5.1 Electrical Connection Overview.....	17
5.2 PV Wiring.....	18
5.3 AC Wiring.....	19
5.4 BAT Wiring.....	20
5.5 Communication Connection.....	20
5.6 Connection of Smart Meter.....	22
5.7 Connection of Grounding Wire.....	23
5.8 Three Inverters in Parallel.....	23
Chapter 6 Commissioning.....	25
6.1 Startup.....	25
6.2 Shutdown.....	25
Chapter 7 Parameter Settings.....	26
7.1 Menu Information.....	26
7.2 "Setting Info" Page.....	31

---

Chapter 8 System Debugging .....	56
8.1 LCD Screen and Keys.....	56
8.2 Working Mode.....	58
8.3 Setting Parameters in Solarman App.....	59
Chapter 9 System Maintenance .....	61
9.1 Regular Maintenance of Inverter .....	61
9.2 Powering Off the Inverter .....	62
9.3 Removing the Inverter .....	62
9.4 Scrapping the Inverter.....	62
Chapter 10 Troubleshooting.....	63
Chapter 11 Product Specifications .....	70

## **Chapter 1    Introduction**

This Manual describes the specification, installation, operations and maintenance of the hybrid inverter.

Please read this Manual carefully to understand the safety information, functions and features of the product before installing and using it. The information provided in this Manual is subject to update from time to time due to product improvements. The latest version and more product information are available on our official website.

## Chapter 2 Safety Precautions

Improper use may result in risk of electric shock or burns. This Manual provides important instructions for installation and maintenance of the product. Please read this Manual carefully before using the product, and keep it for future reference.

### 2.1 Safety Symbols

The following are the safety symbols used in this Manual to indicate potential safety risks and important safety instructions.



**WARNING!**

The warning symbol indicates important safety information that, if not followed properly, could result in serious personal injury or even death.



**RISK OF ELECTRIC SHOCK!**

The electric shock hazard symbol indicates important safety information that, if not followed, could result in electric shock.



**SAFETY TIPS!**

This symbol indicates important safety information that, if not followed, could result in serious personal injury or even death.



**HIGH TEMPERATURE!**

This symbol indicates safety information that, if not strictly followed, could result in burns.



**WARNING!**

When performing maintenance on the input and output of the inverter after disconnecting it, wait at least 5 minutes for the inverter to discharge any remaining electrical charge.

### 2.2 Precautions for Operation

The XD5-12K series hybrid inverter has been designed and tested according to the applicable safety regulations. This ensures the personal safety of the user. However, as an electrical equipment, the inverter could cause electric shock or other injuries if not operated properly. Please operate the inverter in accordance with the following requirements:

1. The wiring, installation and commissioning work should be carried out by professionals.
2. Be sure to read this Manual before operating the product. We shall not be held liable for any failure or loss caused by improper operation.
3. Before starting the installation or maintenance work, please break the connections at the AC side, DC side

and battery side, and then wait at least 5 minutes before proceeding to avoid electric shock.

4. When the inverter is running, the temperature of the housing is high. Do not touch it to avoid getting burned.

5. All electrical installations must conform to local electrical standards. The inverter should be connected to the power grid by professionals with the permission of the local power provider.

6. During the installation, insulated tools and personal protective equipment should be used to ensure personal safety. To touch the electronic components of the inverter, please wear anti-static gloves, anti-static wrist strap or anti-static clothing so as to protect the inverter against electrostatic discharge.

7. Please install the inverter at a position that is out of the reach of children.

8. Do not plug or remove the AC/DC terminal during normal operation of the inverter.

9. The actual DC input voltage should not exceed the maximum allowable DC input voltage of the inverter.

10. Select an appropriate battery that matches the system, and set the battery type correctly. If you select a battery that does not match the hybrid inverter, the system cannot run.

11. If the battery has been completely discharged, please strictly follow the User Manual of the battery to charge the battery.

12. For system maintenance service, please contact our local authorized service personnel or our after-sales personnel.

13. The hybrid inverter system should be connected to the power grid only after getting permission.

14. Turn off the PV switch before installing a solar PV panel during the sunny daytime, or there could be a serious risk of electric shock.

15. Do not connect a PV string to more than one inverter, as this could cause damage to the inverters.

16. Do not connect a device that relies on continuous and stable power supply (such as a life-sustaining medical device), to the emergency power supply (EPS) port.

## Chapter 3 Product Introduction

### 3.1 Intended User

The hybrid inverter in XD series should be installed only by trained professionals who are familiar with local regulations, standards and electrical systems and have a good knowledge of this product.

It is highly recommended that the installer read this Manual carefully, so as to learn about product installation, troubleshooting and communication networking.


### 3.2 Product Overview


The inverter in XD series is intended to store the energy generated in the PV system or provided by the public power grid into the battery, and also output energy to the power grid. In the case of electric power failure, the hybrid inverter can provide energy to the load as a backup power supply.

This Manual applies to the following hybrid inverter models:

XD5KTR\XD6KTR\XD8KTR\XD10KTR\XD12KTR

Overview:

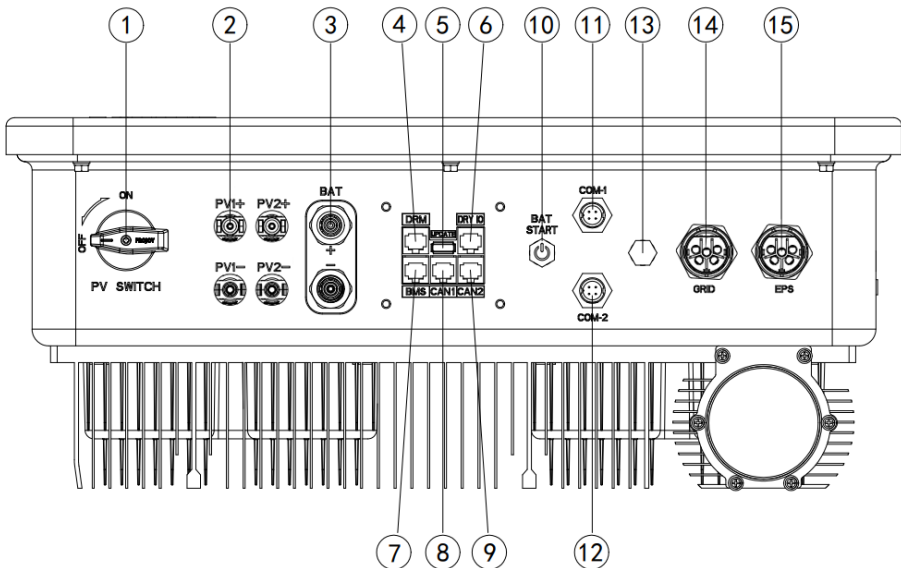

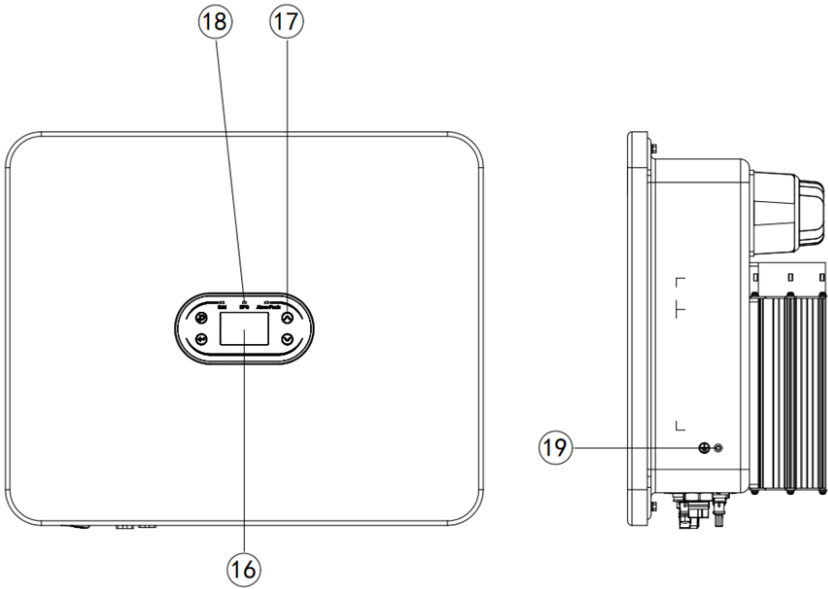


No.	Description	No.	Description
1	PV Input DC Switch	2	PV Input Terminal
3	Battery Terminal	4	RJ45 interface of DRMs (For Australia)
5	USB Port (Software Upgrade)	6	Dry Contact & NTC
7	BMS Lithium Battery Communication	8	CAN1 (Parallel Communication)
9	CAN2 (Parallel Communication)	10	Battery Cold Start Switch
11	COM-1 (RS485 / Wi-Fi / GPRS communication)	12	COM-2 (smart meter RS485 communication)
13	Breather Valve	14	Grid Terminal
15	EPS Output Terminal	16	LCD Screen
17	Function Keys	18	LED Indicator Light
19	PE Grounding Point		



### 3.3 Safety Instructions

1. Be sure to read this Manual before operating the product. We shall not be held liable for any failure or loss caused by improper operation.
2. Select an appropriate battery that matches the system, and set the battery type correctly. If you select a battery that does not match the hybrid inverter, the system cannot run.
3. If the battery has been completely discharged, please strictly follow the User Manual of the battery to charge the battery.
4. The wiring, installation and commissioning work should be carried out by professionals.
5. During the installation, insulated tools and personal protective equipment should be used to ensure personal safety. To touch the electronic components of the inverter, please wear anti-static gloves, anti-static wrist strap or anti-static clothing so as to protect the inverter against electrostatic discharge.
6. All electrical connections must comply with the safety regulations of the local power provider.
7. For system maintenance service, please contact our local authorized service personnel or our after-sales personnel.
8. The hybrid inverter system should be connected to the power grid only after getting permission.
9. Turn off the PV switch before installing a solar PV panel during the sunny daytime, or there could be a serious risk of electric shock.
10. Do not connect a PV string to more than one inverter, as this could cause damage to the inverters.

### 3.4 Schematic Diagram of the Basic System

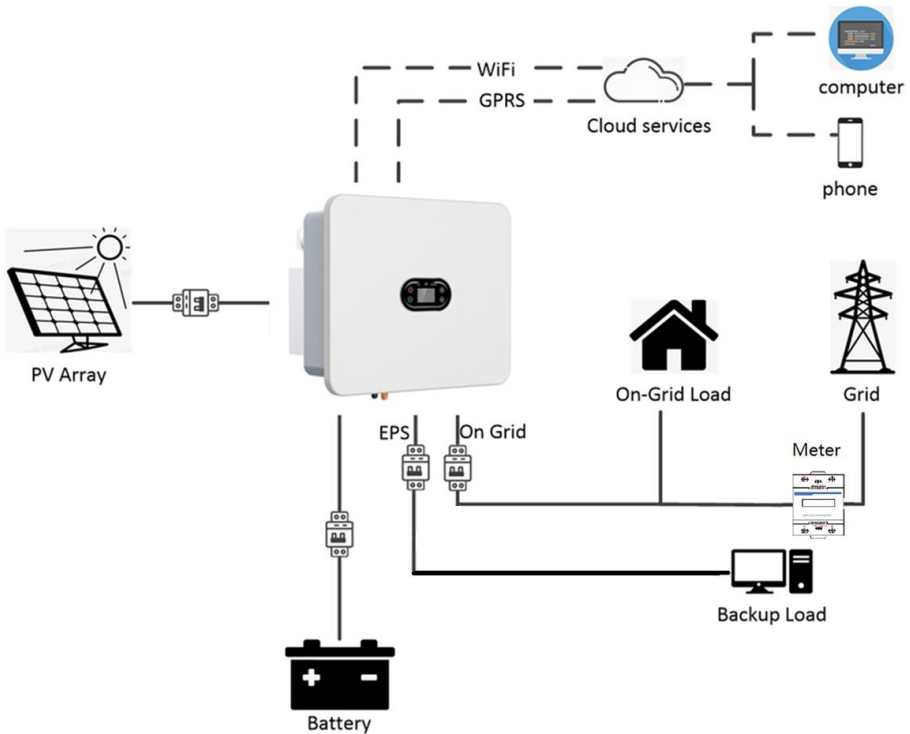

As shown in the diagram above, a complete hybrid inverter system in XD series consists mainly of the solar PV panels, hybrid inverter, battery, and power grid.

Note: The battery is an integral part of the hybrid inverter system. Please keep the installation environment well-ventilated and take necessary measures to control the ambient temperature, so as to prevent the risk of explosion caused by high temperature.

Battery characteristics:

Ingress protection:  $\geq$ IP65; pollution degree: PD2; indoor temperature: 0°C~40°C; RH: 5%~85%

### 3.5 Product Features

1. Intelligent management system and multiple working modes, meeting different customer needs.
2. Allowing you to set the priority of grid connection, battery type and other inverter information on the LCD screen.
3. Dual MPPT, supporting 20A high current input, flexible module configuration.
4. Supporting 50A battery charge and discharge capability.

5. Ultra-wide battery voltage range of 120-600V, with good adaptability with batteries.
6. All-in-one design, providing backup power and peak-shaving function.
7. With a battery safety management system, supporting remote upgrade of BMS system.
8. Supporting anti-reflux prevention.
9. Supporting over-temperature / over-current / short-circuit protection, ensuring safe, stable and reliable operation of the system.
10. Providing a variety of user-friendly communication modules (RS485, GPRS, Wi-Fi), supporting monitoring and remote operations through computer, mobile phone or Internet.
11. Supporting parallel configuration of a maximum of six inverters.
12. Supporting 100% unbalanced load.
13. UPS-level uninterrupted switching capability (<20ms).
14. A maximum conversion efficiency of up to 98.4%.
15. IP66 rating, low weight, small size, easy installation.

## Chapter 4 Installation

### 4.1 Unpacking Inspection

The inverter has been fully tested and strictly inspected before delivery, but damage may still occur during transportation. Before unpacking, carefully check whether the product information indicated on the carton is consistent with that indicated in the Purchase Order, and whether the product package is in good condition. If any damage is detected, contact the carrier or your dealer and provide photos of the damaged area, so as to receive the fastest and best service.

To keep the inverter idle for a long time, please place it in the original carton and protect it against moisture and dust.

After taking the inverter out of the carton, please check the following:

- (1) Whether the inverter remains in good condition;
- (2) Whether you have received the User Manual and all of the connection parts and mounting parts;
- (3) Whether the items you have received are free from damage and shortage;
- (4) Whether the product information indicated in the nameplate on the inverter is consistent with that indicated in the Purchase Order;
- (5) Check with the List of Standard Deliverables below.

Standard deliverables for the hybrid inverter:

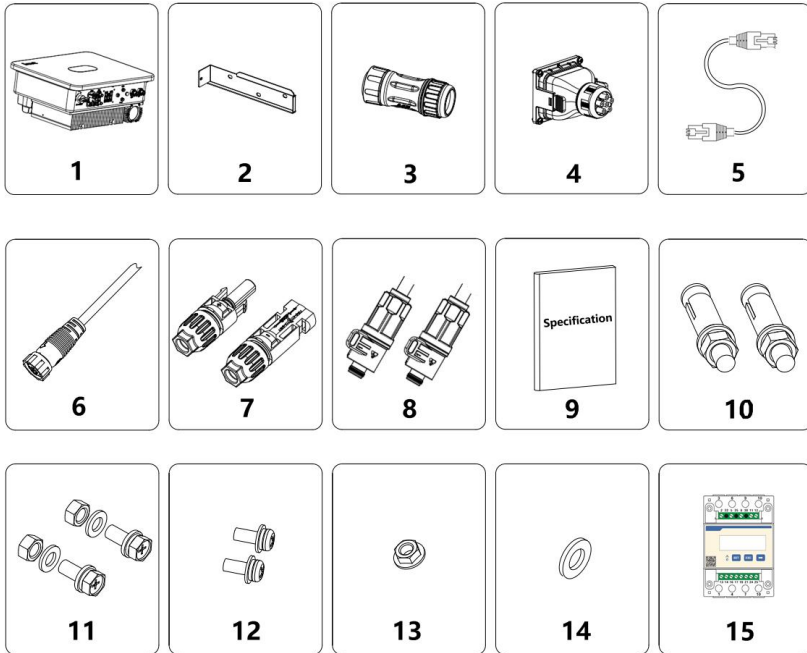


Fig. 4.1 Deliverables for Hybrid Inverter XD5~12KTR

Table 4-1 List of Deliverables for Hybrid Inverter

No.	Name	Quantity
1	Inverter	1
2	Wall-mounting Bracket	1
3	AC Connectors	2
4	Waterproof Junction Box	1
5	Network Cable	1
6	RS485 Communication Cable	1
7	MC4 Connectors (Pair)	2
8	Battery Connectors(Pair)	1
9	Documents(Set)	1
10	M6×50 Bolt Assemblies	3
11	M6×16 Bolt Assemblies	3
12	M4×12 Bolt Assemblies	2
13	M6 Flange Nuts	3
14	M6 Stainless Steel Flat Washers	3
15	Smart Meter	1

Please check the above items carefully, and contact your dealer immediately if you have any questions.

## 4.2 Before Installation

### 4.2.1 Installation Tools

Table 4-2 List of Installation Tools

No.	Installation Tools	Description
1	Marker	Mark mounting holes
2	Electric Drill	Drill holes in the mounting bracket or wall
3	Hammer	Drive expansion bolts
4	Adjustable Wrench	Fix the mounting bracket
5	Screwdriver	Fix the inverter and tighten the junction box
6	Slotted Screwdriver or Phillips Screwdriver	For AC wiring use
7	Megger	Measure the insulation performance and resistance to ground
8	Multimeter	Test circuits and measure AC/DC voltage

No.	Installation Tools	Description
9	Electric Soldering Iron	Weld the communication cable
10	Wire Crimper	Crimp the DC terminal
11	Hydraulic Crimper	Crimp the AC O-terminal

#### 4.2.2 Installation Conditions

- (1) The inverter can be installed in an indoor or outdoor environment.
- (2) During operation of the inverter, the housing and heat sinks will heat up. Do not install the inverter where it can be accessed easily.
- (3) Do not install the inverter in an area where flammable or explosive materials are stored.
- (4) Install the inverter in a well-ventilated environment, so as to facilitate heat dissipation.
- (5) It is recommended to choose an installation position with shade, or build a sunshade.

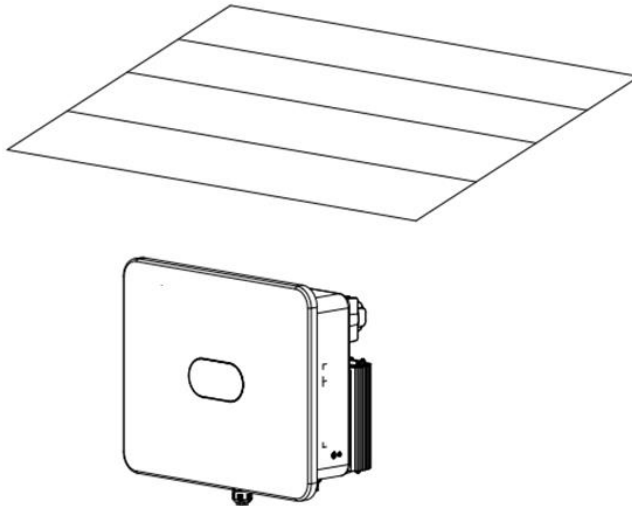


Fig. 4.2 Sunshade

- (6) The ambient temperature should be between  $-25^{\circ}\text{C}$ ~ $60^{\circ}\text{C}$ .
- (7) Install the inverter away from electronic devices with strong electromagnetic interference.
- (8) The product should be installed on a fixed and solid object surface, such as a wall or metal bracket.
- (9) The installation position must provide reliable grounding for the inverter, and the grounding metal conductor must be made of the same material as the reserved grounding metal conductor of the inverter.

### 4.3 Space Requirements

(1) Install the inverter at such a height that allows the operator to observe the LCD indicator lights of the inverter easily.

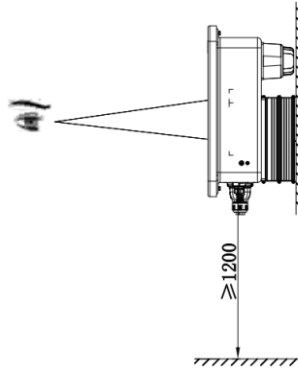


Fig. 4.3 Best Mounting Height

(2) Leave adequate space around the inverter to facilitate air circulation and future handling of the inverter. See Fig. 4.4.

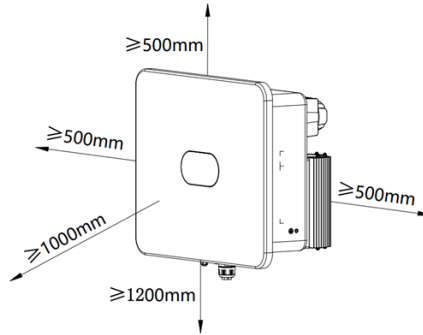


Fig. 4.4 Installation Spacing of Inverter

(3) To install more than one inverter, please keep a certain distance between the inverters and at the top/bottom of the inverters (see Fig. 4.5), so as to facilitate heat dissipation.



Fig. 4.5 Installation Dimension of Side-by-side Inverters

(4) The mounting surface should be upright (see Fig. 4.6). Install the inverter vertically or at a backward tilt of  $\leq 15^\circ$  so as to facilitate heat dissipation. Forward tilt, horizontal installation, upside-down installation, backward tilt of  $>15^\circ$  and sideways tilt are not allowed.

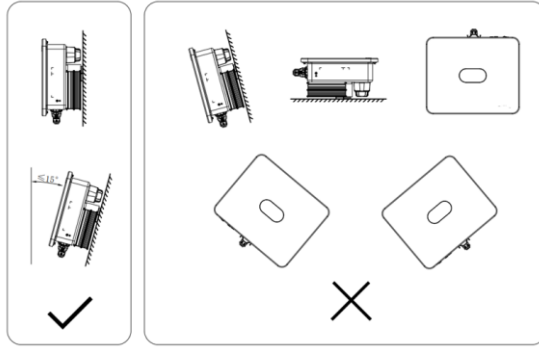


Fig. 4.6 Installation Location of Inverter

#### 4.4 Dimension of Mounting Bracket

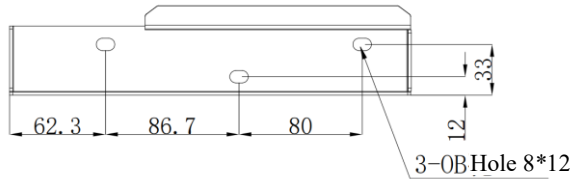


Fig. 4.7 Dimension of Mounting Bracket

#### 4.5 Product Dimension and Weight

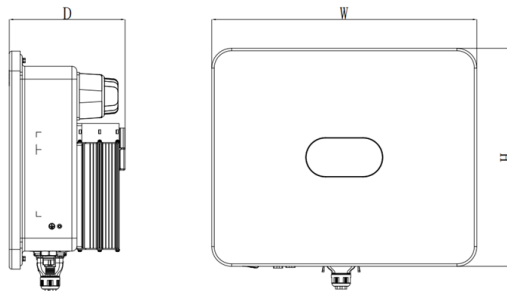


Fig. 4.8 Overall Dimension of Inverter




Dimension and net weight of Hybrid Inverter:


Model No.	Height (H) (mm)	Width (W) (mm)	Depth (D) (mm)	Net Weight (kg)
XD5-12KTR	440	534	232	27

## 4.6 Wall Mounting


**Step 1:** The thickness of the wall for wall-mounted installation should be greater than or equal to 60mm. Using a marker and a spirit level, mark the points where you need to drill the holes.

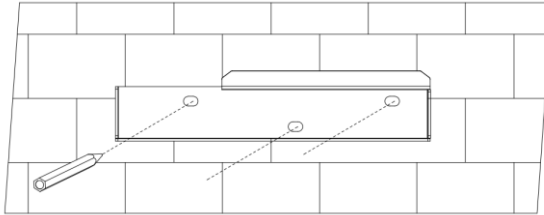

**Step 2:** Drill the holes (diameter:  $\phi 8$ ; depth:  $\geq 55\text{mm}$ ) using a hammer drill, and then install M6 $\times$ 50 stainless-steel expansion bolts.

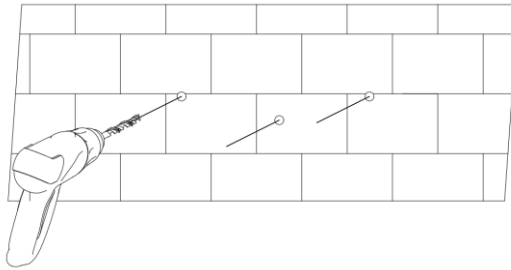


**Step 3:** Fix the mounting bracket. Clean the holes, drive expansion bolts into the holes using a rubber hammer. Tighten the nut to fix the tail of the bolt using a wrench, and then remove the nut, spring washer and flat washer. Fix the wall mount bracket to the wall with the nuts using a tightening torque of 5N•m.

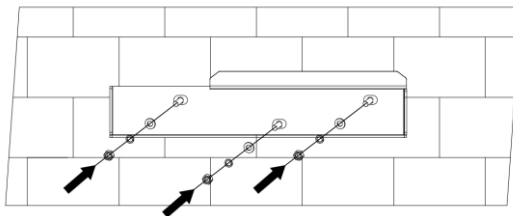


## 4.7 Installation of Inverter

**Step 1:** Take the inverter out of the carton.


**Step 2:** If the installation position is high, you can lift up the inverter to install it to the mounting bracket. Use a hoisting device to lift the inverter off the ground by 100mm, then pause and check the fastening of the lifting ring and ropes. After confirming the inverter is fastened reliably, continue to lift it to its destination.

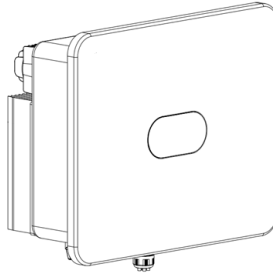

**Step 3:** Snap the bayonets of the inverter into the mounting bracket, and then press the inverter down to ensure that its radiator groove fits well with the mounting bracket.

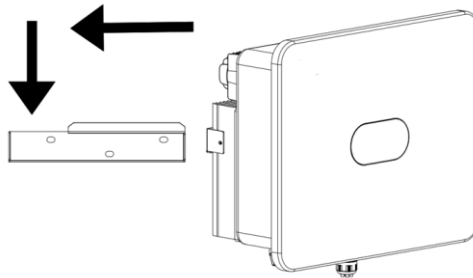

**Step 4:** Tighten M4×12 screws into the left and right holes of the radiator with a torque of 2 N•m so as to fix the inverter onto the mounting bracket.

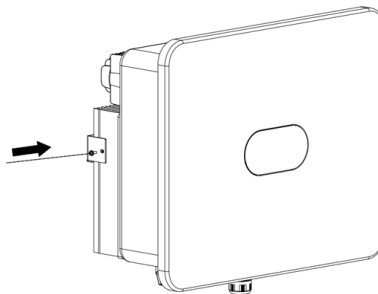




## Chapter 5 Electrical Connection

### 5.1 Electrical Connection Overview

This product supports the following power grid systems.

Note: if the power grid system contains a N wire, the neutral to ground voltage should be lower than 10V.

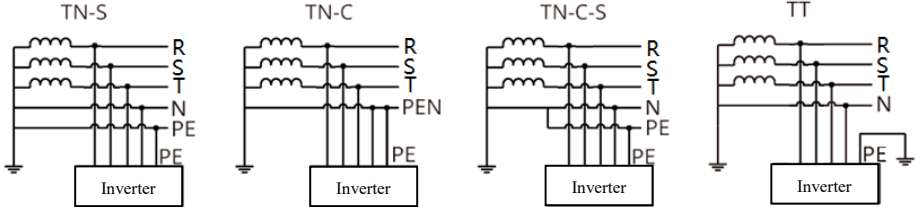


**NOTE**

- The connection modes between the N wire and PE wire at the GRID port and EPS port of the inverter may vary in different regions. Please consult your local regulatory requirements.
- The GRID port and EPS AC port of the inverter have built-in relays. When the inverter works in off-grid state, the built-in GRID relay will be open; when the inverter works in on-grid state, the built-in GRID relay will be closed.
- When the inverter is powered on, the EPS AC port will be charged; if you need to perform maintenance of the EPS load, please power off the inverter first in order to avoid electric shock.


**NOTE**

The following wiring method is applicable for Australia, New Zealand and South Africa.

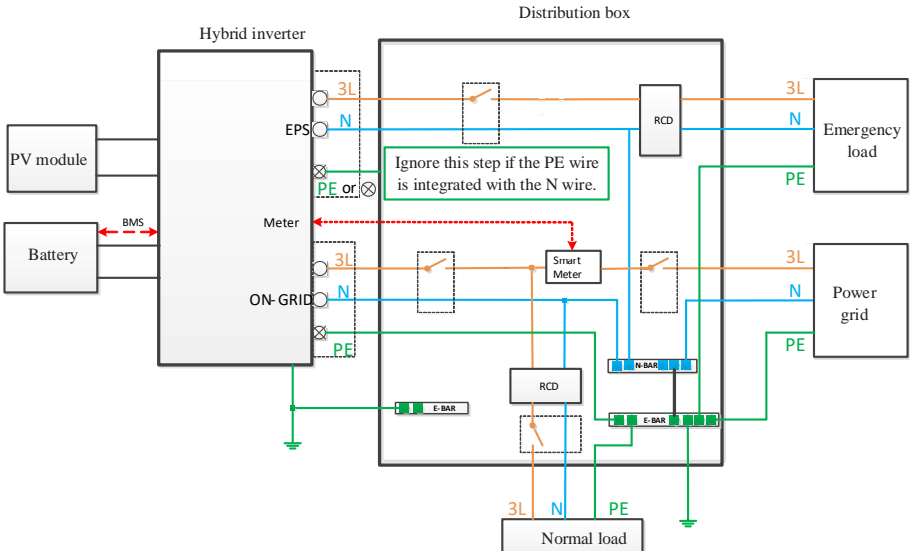

**NOTE**


- Make sure the BACK-UP grounding wire is properly connected and secured; otherwise, the BACK-UP function may fail in the case of power grid failure.
- The following wiring method is applicable for regions other than Australia, New Zealand and South Africa.

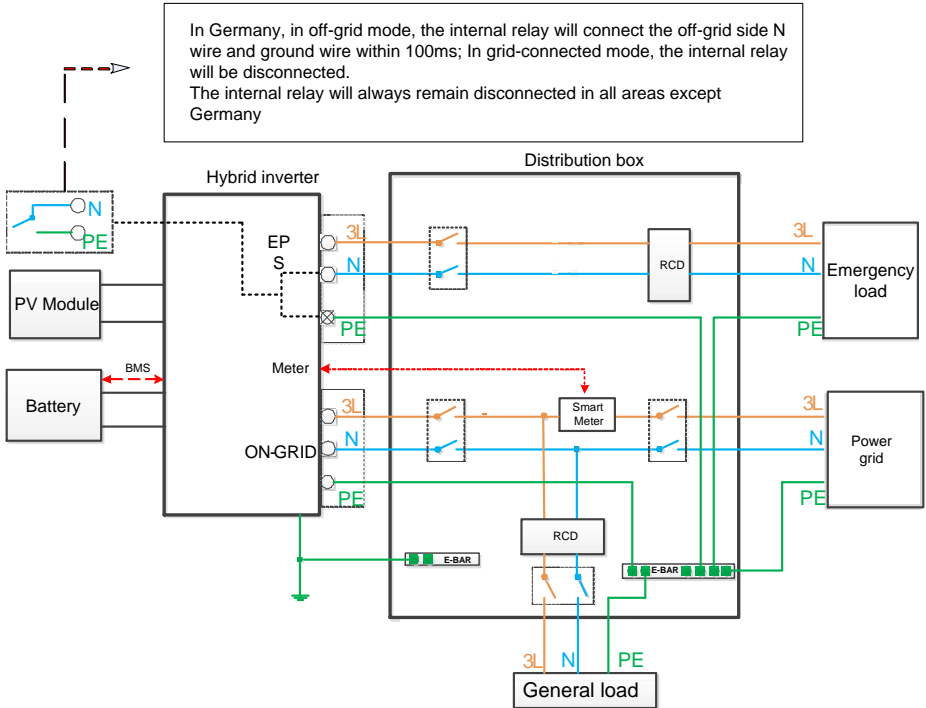

## 5.2 PV Wiring

MC4 connectors are provided at DC input side of the hybrid inverter. Below are the connection steps:

1. Turn off the DC switch.
2. Connect the positive terminal and negative terminal of the PV module respectively to the PV+ port and PV- port of the hybrid inverter. Make sure the actual input voltage and current fall within the allowable range.

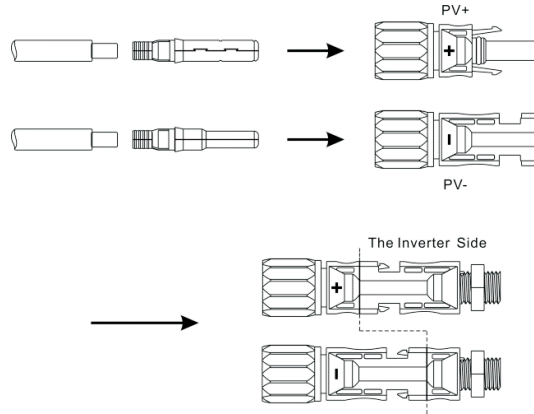

- Maximum allowable PV input voltage: 1100V (Please consider changes in the voltage at the minimum temperature).


- Maximum allowable PV input current: 20A

Note: It is recommended to use a specialized PV cable  $\geq 4\text{mm}^2$  (11AWG).


### 5.3 AC Wiring

The AC output is located at the bottom right of the hybrid inverter. The terminal on the left is the EPS (Off-grid) port, and the terminal on the right is the GRID port. (Refer to the product introduction section for detailed location description).


Step 1: Unscrew the AC terminal, and then use an appropriate tool to remove it as shown below.

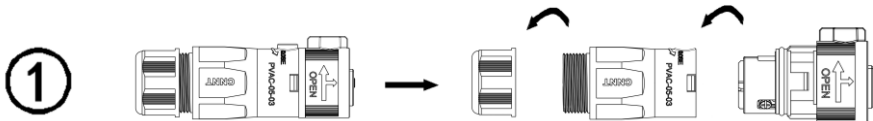

Step 2: Pass the cable through the rubber nut, sealing ring and threaded sleeve in turn. Connect the cable to the corresponding terminal based on the polarity mark, and then tighten the threaded sleeve onto the AC terminal as shown below:

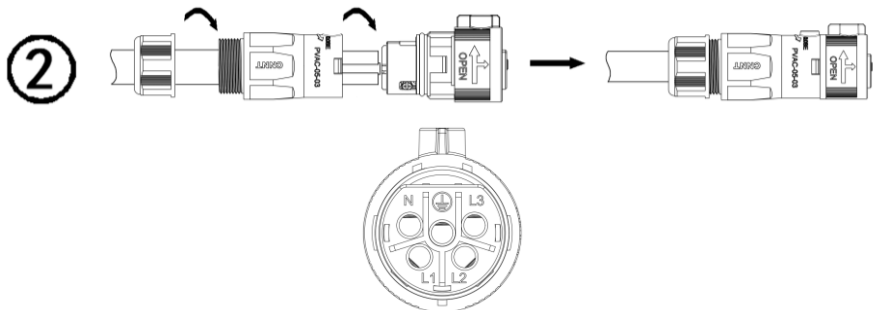

Step 3: Connect the prepared AC terminal to the EPS terminal or GRID terminal of the hybrid inverter as shown below.

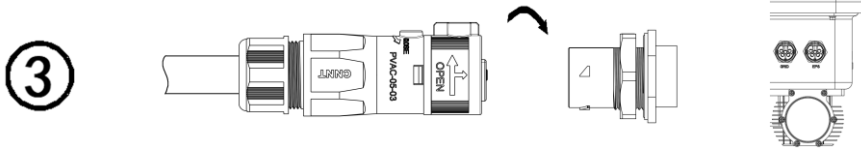


- Note:
1. If you use the grid connection function only, connect the power grid to the GRID port of the inverter.
  2. Do not connect the GRID port directly to the EPS port, as this could cause damage to the inverter.
  3. Do not connect the power grid to the EPS port, as this could cause damage to the inverter.
  4. Power cable for GRID port or EPS port shall be  $\geq 4\text{mm}^2$  (11AWG).

## 5.4 BAT Wiring

Install the battery cable in the following steps:

1. Unscrew the rubber nut on the waterproof cover of the hybrid inverter;
2. Pass the cable through the rubber nut, sealing ring, threaded sleeve and waterproof cover in turn;
3. Crimp the battery cable (supplied in the original package) to the corresponding O-terminal;
4. Connect the positive (negative) terminal of the battery to the positive (negative) battery terminal of the inverter.

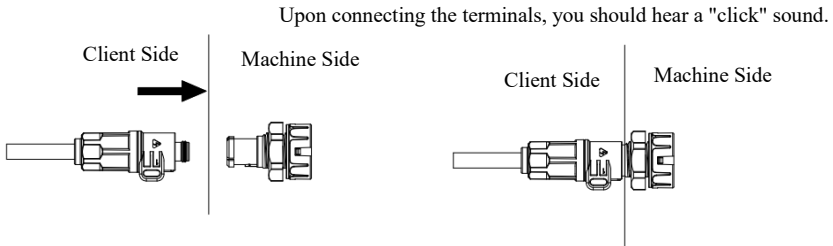

Note: 1. A DC switch is required between the battery and the inverter.

2. Power cable between the battery and the inverter:  $\leq 1.5\text{m}$  in length,  $\geq 8\text{mm}^2$  in cross sectional area (8AWG).

## 5.5 Communication Connection


### 5.5.1 Connection of Lithium Battery


To use a lithium battery, you need to connect the BMS system of the lithium battery in the following steps:

1. Unscrew the rubber nut on the waterproof cover of the hybrid inverter;
2. Pass the LAN cable through the rubber nut, sealing ring, threaded sleeve and waterproof cover in turn;

3. Connect the RJ45 terminal of the LAN cable to the BMS port of the hybrid inverter;
4. Lock the waterproof cover with screws;
5. Screw the rubber nut reliably onto the waterproof cover.

**Definition of RJ45 interface:**

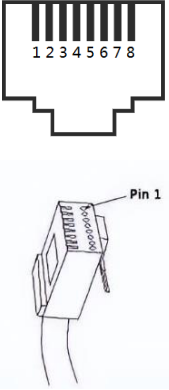	BMS	
Pin 1		
Pin 2		
Pin 3		
Pin 4	CAN-H	
Pin 5	CAN-L	
Pin 6		
Pin 7	GND	
Pin 8	WAKE-UP	

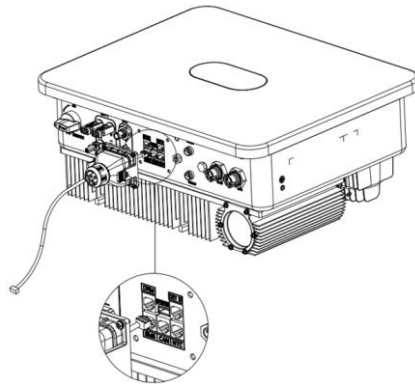

Note: If using lead-acid batteries or lithium batteries without BMS communication, there's no need to connect the BMS communication line. Proceed directly to section 5.5.2.

**5.5.2 Connection for Lead-acid Battery Temperature Sensor and Dry Contact**


To use a lead-acid battery, you need to connect a temperature sensor to monitor the surface temperature of the battery. Connect the temperature sensor in the following steps:

1. Unscrew the rubber nut on the waterproof cover of the hybrid inverter;
2. Pass the NTC cable through the rubber nut, sealing ring, threaded sleeve and waterproof cover in turn;
3. Connect the RJ45 terminal of the NTC cable to the DRY IO/NTC port of the hybrid inverter;
4. Lock the waterproof cover with screws;
5. Screw the rubber nut reliably onto the waterproof cover.

**Definition of interface:**



	NTC port	DRY IO Dry Contact Output
Pin 1		NC OUT (Normally Open)
Pin 2		
Pin 3	GND	
Pin 4		COM
Pin 5		
Pin 6	TEMP	
Pin 7		NO OUT (Normally Closed)
Pin 8		

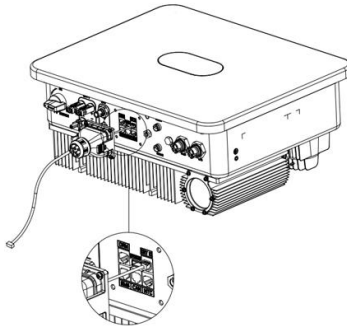


Note: The probe of the temperature sensor used to monitor the ambient temperature of the lead-acid battery should be shorter than 1.5m; if you use lithium battery instead, there is no need to install a temperature sensor.

### 5.6 Connection of Smart Meter


Ender user can also monitor home consumption with a smart meter. You can connect the communication cable of the smart meter as described below.

Connect the smart meter to COM-2 (waterproof RS485 terminal) by plugging and tightening, as shown in the figure below:

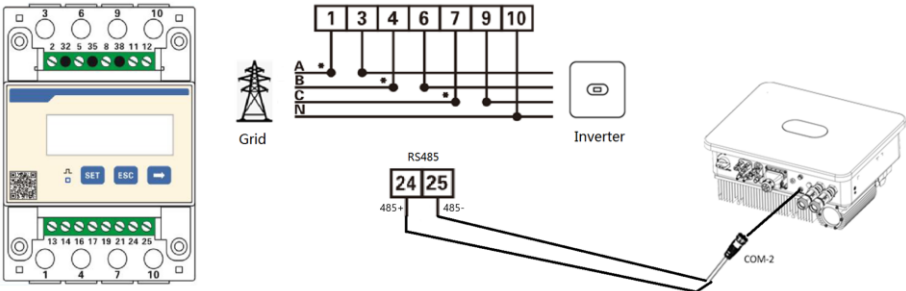


### 5.7 Connection of Grounding Wire


The hybrid inverter should be grounded reliably. The grounding wire should be  $\geq 10\text{mm}^2$ . The grounding point (GND) is shown below.

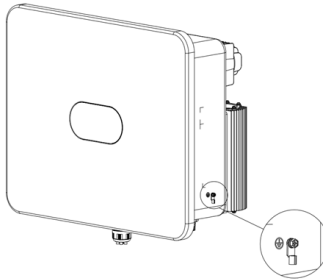

### 5.8 Three Inverters in Parallel

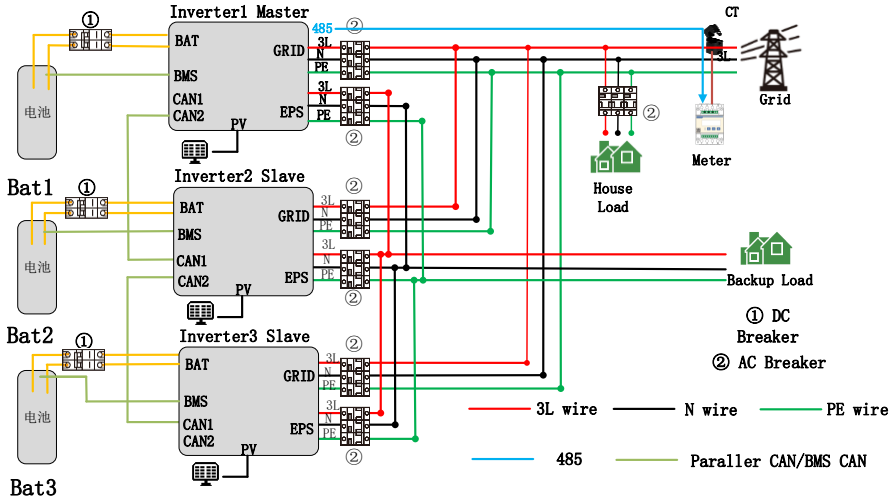

Master/Slave Setting:

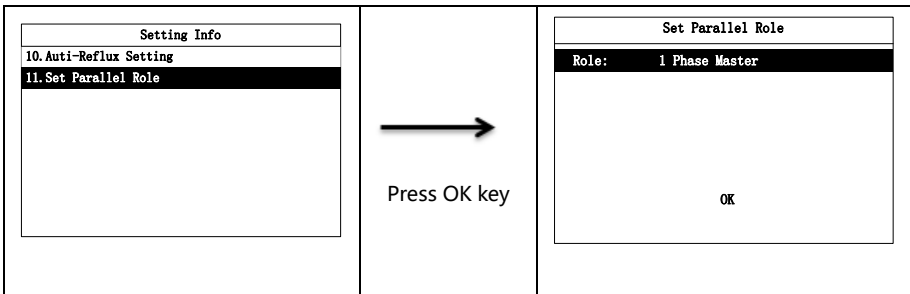

<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Set Parallel Role</p> <p>Role: 1 Phase Master</p> <p style="text-align: center; margin-top: 50px;">OK</p> </div>	<p>→</p> <p>Press Up/ Down key to select Master/Slave</p>	<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Set Parallel Role</p> <p>Role: 2 Slave</p> <p style="text-align: center; margin-top: 50px;">OK</p> </div>	
<p>▼ Press OK key</p>		<p>▼ Press OK key</p>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Set Parallel Role</p> <p>Role: 2 Slave</p> <p style="text-align: center; margin-top: 50px; background-color: black; color: white;">OK</p> </div>	<p>→</p> <p>Press OK key</p>	<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Set Parallel Role</p> <p>Role: 2 Slave</p> <p style="text-align: center; margin-top: 50px; background-color: black; color: white;">Setting</p> </div>	
		<p>▼ Wait 3S</p>	
		<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Set Parallel Role</p> <p>Role: 2 Slave</p> <p style="text-align: center; margin-top: 50px; background-color: black; color: white;">Setting Ok!/Fail!</p> </div>	

## Chapter 6 Commissioning

### 6.1 Startup

Step 1: Close the AC circuit breaker of the inverter at GRID side.

Step 2: Close the DC circuit breaker of the inverter at BAT side.

Step 3: Close the AC circuit breaker of the inverter at EPS side.

Step 4: Turn on the PV switch of the inverter.

Note: The system will work in On Grid state upon normal connections at PV side, GRID side and BAT side.

The green LED will remain on, and the message "State: On Grid" will appear on the screen of the hybrid inverter.

### 6.2 Shutdown

To stop the operation of the hybrid inverter, please disconnect all energy sources to enter automatic shutdown.

Step 1: Turn off the PV switch.

Step 2: Turn off the BAT switch.


Step 3: Disconnect the power grid.

Both the LED light and LCD screen will be turned off.

Note: At the end of the above steps, please wait at least 5 minutes before proceeding to other operations.

## Chapter 7 Parameter Settings

On the LCD screen, you can check the current state of the system, energy flow diagram, operation information and fault information, or set the language, priority of charging and discharging and system time. The main screen shows the energy flow diagram by default.

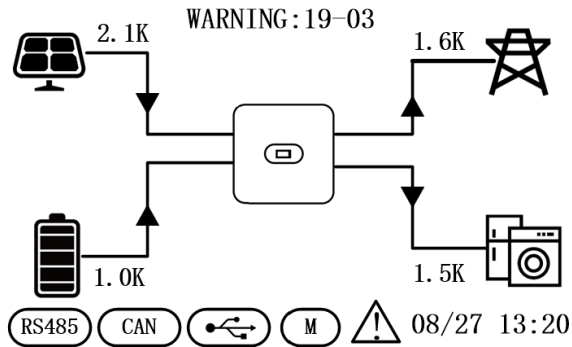

Below are the possible states of the inverter:

1. Initializing: In standby mode when no fault is detected, the inverter gets into waiting state for some reason.
2. Waiting: The inverter enters self-check. If no fault is detected, the system will enter standby mode or normal working mode.
3. On Grid: The inverter is working in on-grid state.
4. Fault: In case of a fault, the inverter will stop working and get into protected mode.
5. Programming: The inverter is currently programming.
6. Off Grid: The inverter is working in off-grid state.
7. Bypass Status: The inverter operates in bypass mode.

### 7.1 Menu Information

On the main screen, press the OK, ESC, Up or Down key to go to the Menu Info page. The Menu Info page is shown below.


Menu Info
1. PV Info
2. AC Output Info
3. BAT Info
4. EPS Output Info
5. Basic Info
6. Energy Info
7. Fault Info
8. Setting Info

On the Menu Info page, press the Up or Down key to select a menu item. The page of each menu item is

shown below.

### 7.1.1 PV Input Information


Here you can check the PV input voltage, current and power.

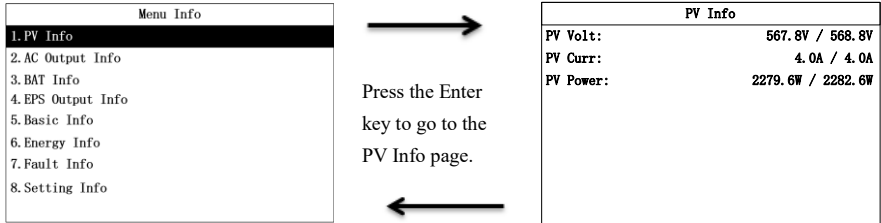

Press the ESC key to exit the PV Info page.

### 7.1.2 AC Output Information

Here you can check the AC voltage, frequency and current as well as the meter power.

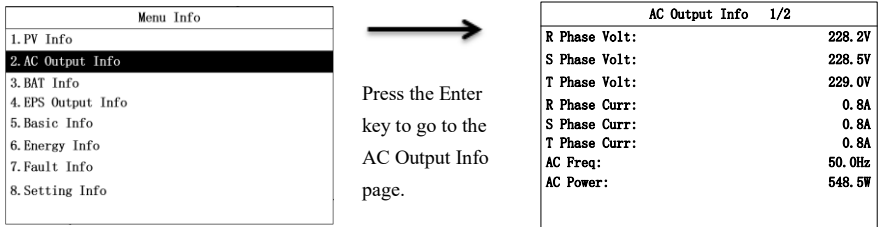


Press the Down key

Press the ESC key to exit the AC Output Info page.

AC Output Info 2/2	
R Meter Power:	-185.4W
S Meter Power:	-178.6W
T Meter Power:	-178.6W
Total:	-560.3W


### 7.1.3 Battery Information

Here you can check the battery type, battery voltage, battery current, battery power, SOC as well as the battery's temperature.

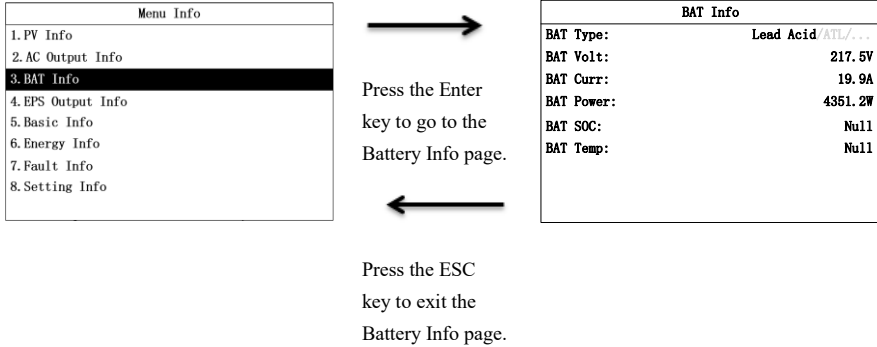


### 7.1.4 EPS Output Information

Here you can check the EPS voltage, frequency, current and power as well as the load power.

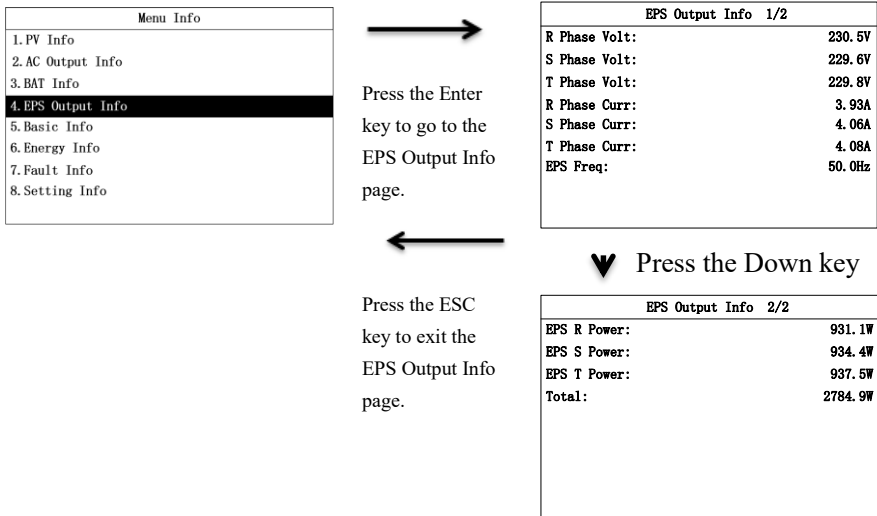


### 7.1.5 Basic Information

Here you can check the date & time, rated power, serial number, communication address and firmware version.

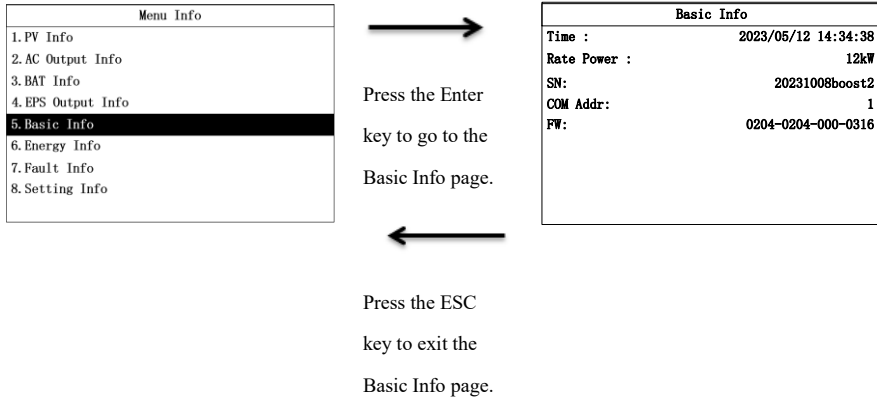

### 7.1.6 Energy Information


Here you can check daily and total energy generated by the inverter, daily battery charging/discharging energy, total battery charging/discharging energy, daily electricity sales and total electricity sales of the grid and daily electricity consumption and total electricity consumption of the load as well.

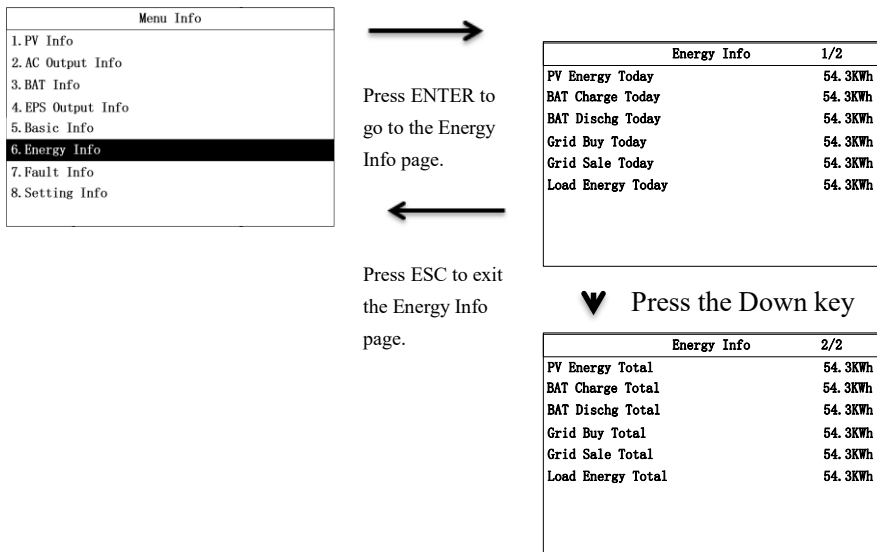

### 7.1.7 Fault Information

Here you can view the total number of fault/warning logs, as well as the main and sub codes for each fault/warning, along with the date and time of occurrence.



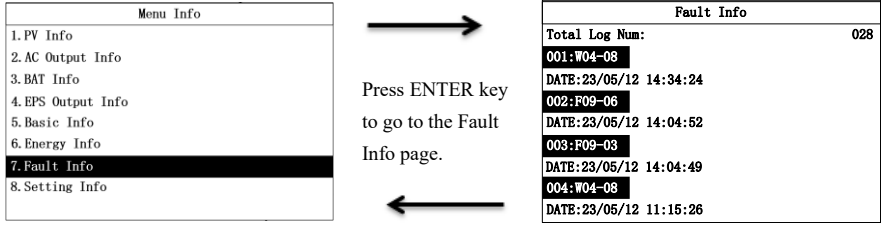


Press ENTER key to go to the Fault Info page.

Press ESC to exit the Fault Info page.

### 7.1.8 Setting Information


Enter the password to access the Settings page. On the Menu page, select Set Page. The Enter Password page is displayed. Set password 123 The Setting information page is displayed. Set password 321 The Local control page is displayed.

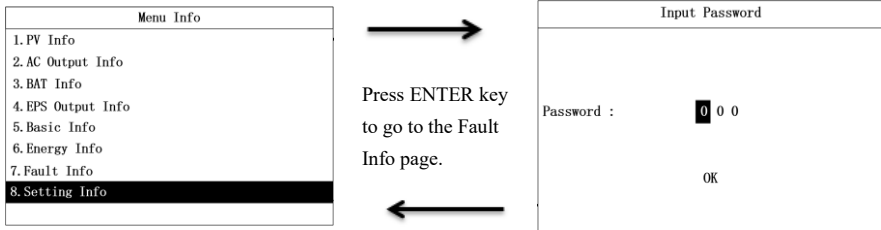


Press ENTER key to go to the Fault Info page.

Press ESC to exit the Fault Info page


Enter the password in the following steps.

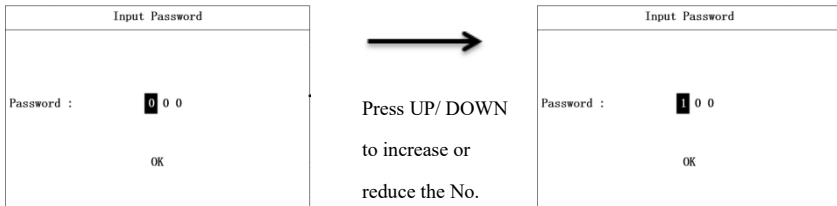


Press OK

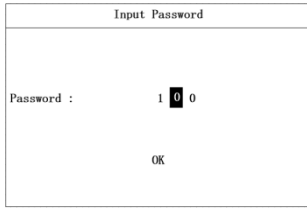


Press UP/ DOWN  
to increase or  
reduce the No.

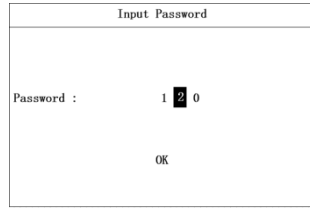


Press OK

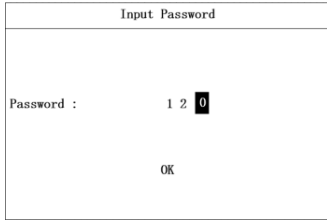


Press UP/ DOWN  
to increase or  
reduce the No.

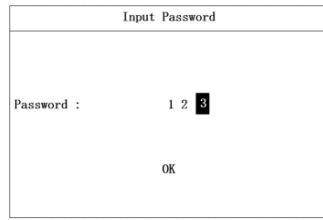


Press OK

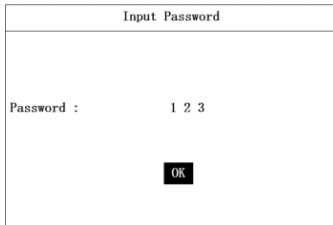

Press UP/ DOWN  
to increase or  
reduce the No.

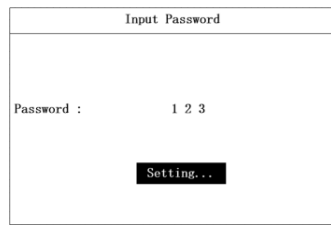

Wait for 3 seconds.

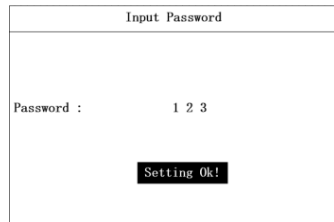

## 7.2 "Setting Info" Page

On the Setting Info page, you can set such parameters as the date & time, COM address, language, country, and priority. The Setting Info page is shown below.

Setting Info	1/2
1. Date & Time Setting	
2. COM Address Setting	
3. Language Setting	
4:BAT Setting	
5. Country Setting	
6. EPS Setting	
7. Priority Setting	
8. Auto Test Setting	
9. Restore Factory Setting	

Setting Info	2/2
10. Meter Setting	

### 7.2.1 Date & Time Setting

Setting Info	1/2
1. Date & Time Setting	
2. COM Address Setting	
3. Language Setting	
4:BAT Setting	
5. Country Setting	
6. EPS Setting	
7. Priority Setting	
8. Auto Test Setting	
9. Restore Factory Setting	



Press ENTER key

Date & Time Setting
Day-Month-Year: 24 / 02 / 23
Hour-Min-Sec: 19: 41 : 39
OK

Date & Time Setting
Day-Month-Year: 24 / 02 / 23
Hour-Min-Sec: 19: 41 : 39
OK



Press UP/ DOWN  
to increase or  
reduce the No.

Date & Time Setting
Day-Month-Year: 25 / 08 / 22
Hour-Min-Sec: 19:41:39
OK



Press OK

Date & Time Setting

Day-Month-Year: 25 / 08 / 22  
Hour-Min-Sec: 19:41:39

OK



Press UP/ DOWN  
to increase or  
reduce the No.

Date & Time Setting

Day-Month-Year: 25 / 09 / 22  
Hour-Min-Sec: 19:41:39

OK



Press OK

Date & Time Setting

Day-Month-Year: 25 / 08 / 22  
Hour-Min-Sec: 19:41:39

OK



Press UP/ DOWN  
to increase or  
reduce the No.

Date & Time Setting

Day-Month-Year: 25 / 08 / 23  
Hour-Min-Sec: 19:41:39

OK



Press OK

Date & Time Setting

Day-Month-Year: 25 / 08 / 22  
Hour-Min-Sec: 19:41:39

OK



Press UP/ DOWN  
to increase or  
reduce the No.

Date & Time Setting

Day-Month-Year: 25 / 08 / 22  
Hour-Min-Sec: 20:41:39

OK



Press OK

Date & Time Setting

Day-Month-Year: 25 / 08 / 22  
Hour-Min-Sec: 19:41:39

OK



Press UP/ DOWN  
to increase or  
reduce the No.


Date & Time Setting

Day-Month-Year: 25 / 08 / 22  
Hour-Min-Sec: 19:42:39


OK




Press OK

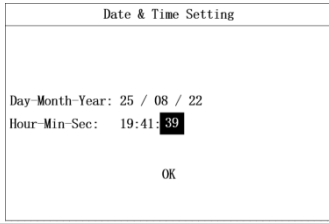


Press UP/ DOWN  
to increase or  
reduce the No.

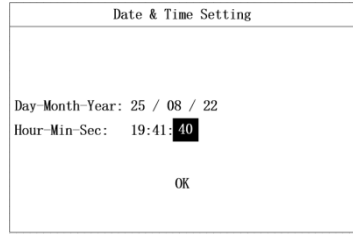


Press OK

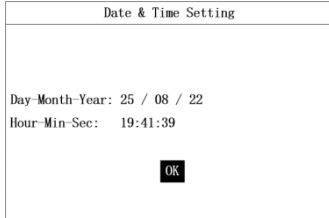


Press OK

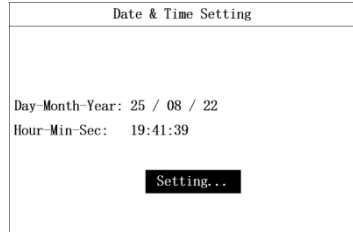


Wait for 3 seconds.

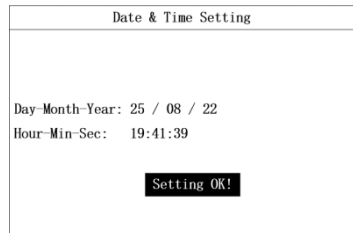

### 7.2.2 COM Address Setting

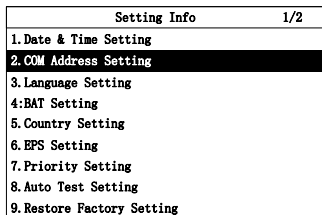

Press ENTER key

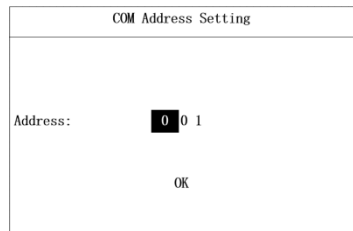

COM Address Setting

Address: 0 0 1

OK



Press UP/ DOWN  
to increase or  
reduce the No.

COM Address Setting

Address: 1 0 1

OK



Press OK

COM Address Setting

Address: 0 0 1

OK



Press UP/ DOWN  
to increase or  
reduce the No.

COM Address Setting

Address: 0 1 1

OK



Press OK

COM Address Setting

Address: 0 0 1

OK



Press UP/ DOWN  
to increase or  
reduce the No.

COM Address Setting

Address: 0 0 2

OK



Press OK

COM Address Setting

Address: 0 0 1

OK



Press OK


COM Address Setting

Address: 0 0 1


Setting...





Wait 3 seconds

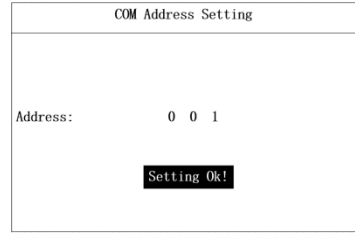


### 7.2.3 Language Setting

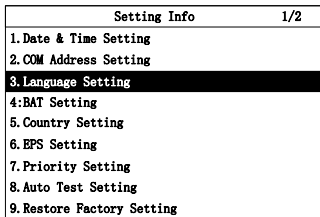


→  
Press ENTER key

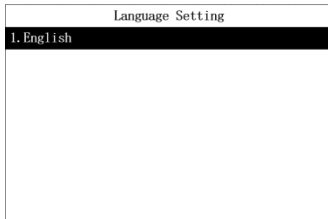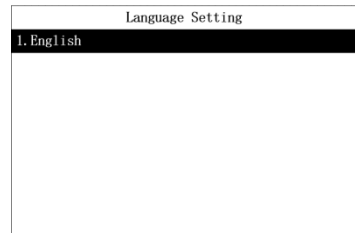

→  
Press ENTER key

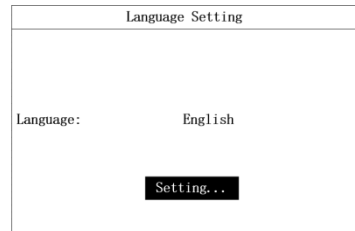

⏏ Wait 3 seconds

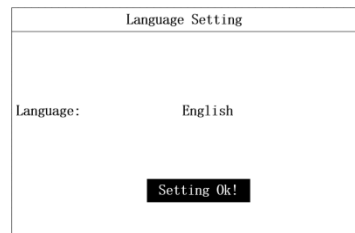

### 7.2.4 BAT Setting

The battery parameters displayed on the Setting Info page depend on the battery manufacturer. For lead-acid batteries, the battery parameters will include Charge Voltage (CV), Charge Current (CC) and Low Voltage (LV). For lithium batteries, the battery parameters will include Maximum Charge Current, Maximum Discharge Current,

and Depth of Discharge (DOD) and Battery Wakeup function. You can set the lead-acid battery parameters in the following steps.

Setting Info		1/2
1. Date & Time Setting		
2. COM Address Setting		
3. Language Setting		
<b>4. Bat Setting</b>		
5. Country Setting		
6. EPS Setting		
7. Priority Setting		
8. Auto Test Setting		
9. Restore Factory Setting		

→

Press ENTER key

BAT Setting	
BAT Type:	<b>Lead Acid</b>
LV:	120V
HV:	600V
Charge Curr:	50A
Discharge Curr:	50A
OK	

BAT Setting	
BAT Type:	<b>Lead Acid</b>
LV:	120V
HV:	600V
Charge Curr:	50A
Discharge Curr:	50A
OK	

→

Press UP/DOWN  
to select lead-acid  
or li-ion battery  
manufacturer

BAT Setting	
BAT Type:	<b>ATL</b>
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Disable
OK	

▼ Press OK

BAT Setting	
BAT Type:	<b>Lead Acid</b>
LV:	<b>120V</b>
HV:	600V
Charge Curr:	50A
Discharge Curr:	50A
OK	

→

Press UP/ DOWN  
to increase or  
reduce LV value

BAT Setting	
BAT Type:	<b>Lead Acid</b>
LV:	<b>121V</b>
HV:	600V
Charge Curr:	50A
Discharge Curr:	50A
OK	

▼ Press OK

BAT Setting	
BAT Type:	<b>Lead Acid</b>
LV:	120V
HV:	<b>600V</b>
Charge Curr:	50A
Discharge Curr:	50A
OK	

→

Press UP/ DOWN  
to increase or  
reduce HV value

BAT Setting	
BAT Type:	<b>Lead Acid</b>
LV:	120V
HV:	<b>599V</b>
Charge Curr:	50A
Discharge Curr:	50A
OK	



Press OK

BAT Setting	
BAT Type:	Lead Acid
LV:	120V
HV:	600V
Charge Curr:	50A
Discharge Curr:	50A
OK	



Press UP/ DOWN  
to increase or  
reduce Charge  
Current value

BAT Setting	
BAT Type:	Lead Acid
LV:	120V
HV:	600V
Charge Curr:	49A
Discharge Curr:	50A
OK	

Press OK

BAT Setting	
BAT Type:	Lead Acid
LV:	120V
HV:	600V
Charge Curr:	50A
Discharge Curr:	50A
OK	



Press UP/ DOWN  
to increase or  
reduce Discharge  
Current value

BAT Setting	
BAT Type:	Lead Acid
LV:	120V
HV:	600V
Charge Curr:	50A
Discharge Curr:	49A
OK	

Press OK

BAT Setting	
BAT Type:	Lead Acid
LV:	120V
HV:	600V
Charge Curr:	50A
Discharge Curr:	50A
OK	



Press OK

BAT Setting	
BAT Type:	Lead Acid
LV:	120V
HV:	600V
Charge Curr:	50A
Discharge Curr:	50A
Setting...	

Wait 3S

BAT Setting	
BAT Type:	Lead Acid
LV:	120V
HV:	600V
Charge Curr:	50A
Discharge Curr:	50A
Setting OK!	

You can set the lithium battery parameters in the following steps.

Setting Info	1/2
1. Date & Time Setting	
2. COM Address Setting	
3. Language Setting	
<b>4. Bat Setting</b>	
5. Country Setting	
6. EFS Setting	
7. Priority Setting	
8. Auto Test Setting	
9. Restore Factory Setting	



Press ENTER key

BAT Setting	
BAT Type:	<b>ATL</b>
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Disable
OK	

▼ Press ENTER key

BAT Setting	
BAT Type:	<b>ATL</b>
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Disable
OK	



Press UP/ DOWN  
to select li-ion  
battery  
manufacturer

BAT Setting	
BAT Type:	<b>VestWoods</b>
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Disable
OK	

▼ Press OK

BAT Setting	
BAT Type:	<b>ATL</b>
Charge Curr:	<b>10A</b>
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Disable
OK	



Press UP/ DOWN  
to increase or  
reduce Charge  
Current value

BAT Setting	
BAT Type:	<b>ATL</b>
Charge Curr:	<b>11A</b>
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Disable
OK	

▼ Press OK

BAT Setting	
BAT Type:	<b>ATL</b>
Charge Curr:	10A
Discharge Curr:	<b>50A</b>
DOD :	100%
BatWakeUp:	Disable
OK	



Press UP/ DOWN  
to increase or  
reduce Discharge  
Current value

BAT Setting	
BAT Type:	<b>ATL</b>
Charge Curr:	10A
Discharge Curr:	<b>49A</b>
DOD :	100%
BatWakeUp:	Disable
OK	

Press OK

BAT Setting	
BAT Type:	ATL
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Disable
OK	



Press UP/ DOWN  
to increase or  
reduce DOD  
(Depth of  
Discharge) value

BAT Setting	
BAT Type:	ATL
Charge Curr:	10A
Discharge Curr:	50A
DOD :	99%
BatWakeUp:	Disable
OK	



Press OK



Press OK

BAT Setting	
BAT Type:	ATL
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Disable
OK	



Press UP/ DOWN  
to enable/disable  
BatWakeUp

BAT Setting	
BAT Type:	ATL
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Enable
OK	



Press OK

BAT Setting	
BAT Type:	ATL
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Enable
OK	



Press OK

BAT Setting	
BAT Type:	ATL
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Enable
Setting...	



Wait 3 Seconds

BAT Setting	
BAT Type:	ATL
Charge Curr:	10A
Discharge Curr:	50A
DOD :	100%
BatWakeUp:	Enable
Setting OK!	

### 7.2.5 Country Setting

Setting Info	1/2
1. Date & Time Setting	
2. COM Address Setting	
3. Language Setting	
4. BAT Setting	
<b>5. Country Setting</b>	
6. EPS Setting	
7. Priority Setting	
8. Auto Test Setting	
9. Restore Factory Setting	



Press the OK key.

Country Setting	1/3
<b>1. CQC2013</b>	
2. SKYWORTH	
3. EN50549	
4. BRAZIL	
5. SPAIN	
6. PHILIPPINES	
7. INDIA	
8. BELGIUM	
9. EN50438	

Country Setting	1/3
<b>1. CQC2013</b>	
2. SKYWORTH	
3. EN50549	
4. BRAZIL	
5. SPAIN	
6. PHILIPPINES	
7. INDIA	
8. BELGIUM	
9. EN50438	



Press UP/DOWN to select Country or Grid Code)

Country Setting	1/3
1. CQC2013	
2. SKYWORTH	
<b>3. EN50549</b>	
4. BRAZIL	
5. SPAIN	
6. PHILIPPINES	
7. INDIA	
8. BELGIUM	
9. EN50438	




Press ENTER key


Country Setting	
Country:	EN50549
Setting...	





Wait 3 seconds

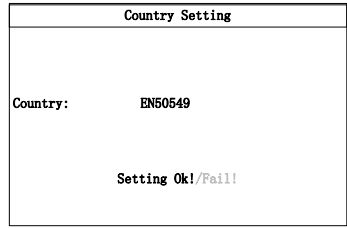


### 7.2.6 EPS Setting

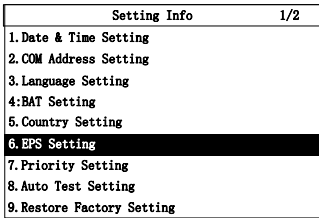


→  
Press ENTER key

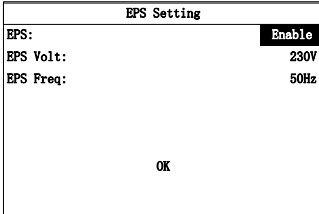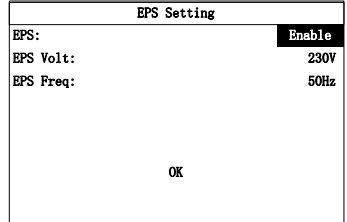


→  
Press UP/DOWN  
to enable/disable  
EPS output

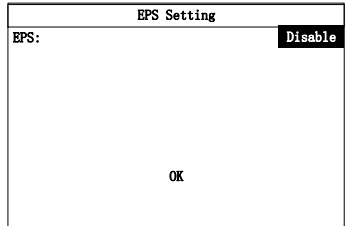


▼ Press OK

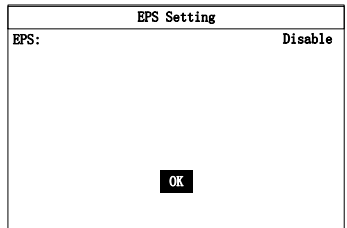


▼ Press OK

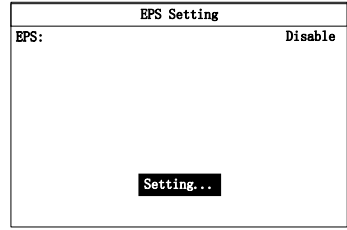


▼ Wait 3 seconds

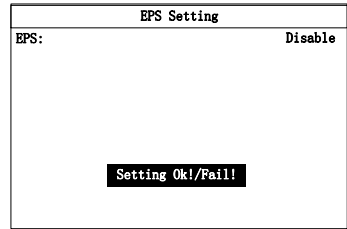


Enable the off-grid mode and set the EPS voltage and frequency in the following steps.

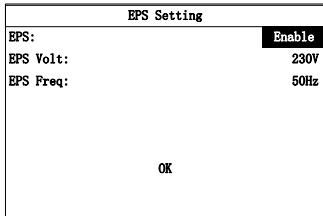


Press UP/DOWN  
to enable/disable  
EPS

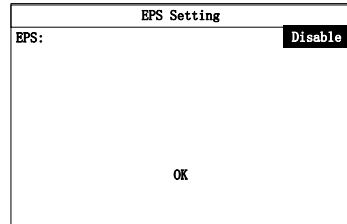

▼ Press OK

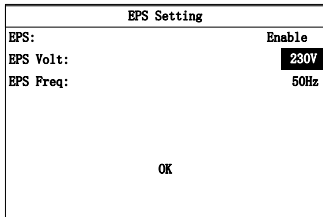

Press UP/DOWN  
to increase or  
reduce EPS  
output voltage

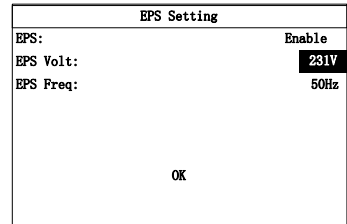

▼ Press OK

EPS Setting	
EPS:	Enable
EPS Volt:	230V
EPS Freq:	50Hz
OK	



Press UP/DOWN  
to increase or  
reduce EPS  
output frequency

EPS Setting	
EPS:	Enable
EPS Volt:	230V
EPS Freq:	60Hz
OK	



Press OK

EPS Setting	
EPS:	Enable
EPS Volt:	230V
EPS Freq:	50Hz
OK	



Press OK

EPS Setting	
EPS:	Enable
EPS Volt:	230V
EPS Freq:	50Hz
Setting...	



Press OK

EPS Setting	
EPS:	Enable
EPS Volt:	230V
EPS Freq:	50Hz
Setting OK!	

When the German safety regulations are set, there is one more N-PE setting item:

EPS Setting	
EPS:	Enable
EPS Volt:	230V
EPS Freq:	50Hz
N-PE:	Enable
OK	

### 7.2.7 Priority Setting

Priority setting includes Bat First mode and Grid First mode, the time periods other than Battery and Grid Priority are Load Priority.

Setting Info	1/2
1. Date & Time Setting	
2. COM Address Setting	
3. Language Setting	
4:BAT Setting	
5. Country Setting	
6. EPS Setting	
<b>7. Priority Setting</b>	
8. Auto Test Setting	
9. Restore Factory Setting	



Press ENTER key

Priority Setting
<b>1. Bat First Setting</b>
2. Grid First Setting

Set the Bat First mode in the following steps.

Priority Setting
<b>1. Bat First Setting</b>
2. Grid First Setting



Press ENTER key

BAT First Setting	
AC Charge:	<b>Enable</b>
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	

BAT First Setting	
AC Charge:	<b>Enable</b>
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



Press UP/DOWN  
to enable/disable  
AC Charge

BAT First Setting	
AC Charge:	<b>Disable</b>
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



Press OK

BAT First Setting	
AC Charge:	Disable
Time Period:	<b>1</b>
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



Press UP/DOWN  
to set Time Period

BAT First Setting	
AC Charge:	Disable
Time Period:	<b>2</b>
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



▼ Press OK

BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Enable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	

Press UP/DOWN  
to enable/disable  
Time Period

▼ Press OK

BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	01:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	02:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	

Press UP/DOWN  
to increase/reduce  
Time value

▼ Press OK

BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	50%
Power Percent:	100%
OK	



BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	51%
Power Percent:	100%
OK	

Press UP/DOWN  
to increase/reduce  
Stop SOC value

▼ Press OK

BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	50%
Power Percent:	50%
OK	



BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	50%
Power Percent:	51%
OK	

Press UP/DOWN  
to increase or  
reduce Battery  
Power Percent

▼ Press OK

BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	

→  
Press OK

BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
Setting...	

▼ Wait 3 seconds

BAT First Setting	
AC Charge:	Disable
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
Setting OK!	

Set Grid First mode in the following steps.

Priority Setting	
1. Bat First Setting	
<b>2. Grid First Setting</b>	

→  
Press ENTER key

Grid First Setting	
Time Period:	<b>1</b>
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	

▼ Press OK

Grid First Setting	
Time Period:	<b>1</b>
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	

→  
Press UP/DOWN  
to select Time  
Period

Grid First Setting	
Time Period:	<b>2</b>
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	

▼ Press OK

Grid First Setting	
Time Period:	1
Time Active:	Enable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



Press UP/DOWN  
to enable/disable  
Time Period

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



Press OK

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	01:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



Press UP/DOWN  
to enable/disable  
Time value

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	02:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
OK	



Press OK

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	50%
Power Percent:	100%
OK	



Press UP/DOWN  
to increase or  
reduce Stop SOC  
value

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	51%
Power Percent:	100%
OK	



Press OK

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	50%
OK	



Press UP/DOWN  
to increase or  
reduce Battery  
Power Percent

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	51%
OK	



Press OK

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
<b>OK</b>	



Press OK

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
Setting...	

▼ Wait 3 seconds

Grid First Setting	
Time Period:	1
Time Active:	Disable
Time:	00:00 - 00:00
Stop SOC:	100%
Power Percent:	100%
Setting OK!	

### 7.2.8 AutoTest Setting

The auto test function will be available only if you select "Italy" on the Country Setting page. If you select any other country, the AutoTest Setting page will indicate "Not Support!"

Setting Info	1/2
1. Date & Time Setting	
2. COM Address Setting	
3. Language Setting	
4. BAT Setting	
5. Country Setting	
6. EPS Setting	
7. Priority Setting	
<b>8. Auto Test Setting</b>	
9. Restore Factory Setting	



Press ENTER key

AutoTest Setting
Not Support!

If "Italy" is selected, the AutoTest Setting page is shown below.

Setting Info	1/2
1. Date & Time Setting	
2. COM Address Setting	
3. Language Setting	
4. BAT Setting	
5. Country Setting	
6. EPS Setting	
7. Priority Setting	
8. Auto Test Setting	
9. Restore Factory Setting	



Press ENTER key

AutoTest Setting	
59. S1:	450. 3V 1000ms
27. S1:	340. 5V 1000ms
81>. S1:	59. 15Hz 100ms
81<. S1:	49. 80Hz 100ms
59. S2:	450. 3V 1000ms
27. S2:	340. 5V 1000ms
81>. S2:	59. 15Hz 100ms
81<. S2:	49. 80Hz 100ms

**AutoTest Start**

The Real value will vary with time once you start the auto test.

AutoTest Setting	
59. S1:	450. 3V 1000ms
27. S1:	340. 5V 1000ms
81>. S1:	59. 15Hz 100ms
81<. S1:	49. 80Hz 100ms
59. S2:	450. 3V 1000ms
27. S2:	340. 5V 1000ms
81>. S2:	59. 15Hz 100ms
81<. S2:	49. 80Hz 100ms

**AutoTest Start**



Press ENTER key

AutoTest Setting	
Auto Testing ...	
Step:	59. S1
Limit:	450. 3V 1000ms
Real:	400. 5V

When an item has been tested, you can see its trigger limit and test result.

AutoTest Setting	
Auto Testing ...	
Step:	59. S1
Limit:	450. 3V 1000ms
Real:	400. 5V



The information is updated automatically

AutoTest Setting	
Auto Testing...	
Step:	59. S1
Limit:	450. 3V 1000ms
Trip:	450. 5V 1000ms
Result:	Pass

When all items have been tested, you can see the auto test results as well as the trigger limits of all items.

AutoTest Setting	
AutoTesting...	
Step:	81<. S2
Limit:	340. 3V 1000ms
Trip:	341. 5V 1000ms
Result:	Pass



The information is updated automatically

AutoTest Setting	
Auto Test Finish	
Result:	Pass
59. S1:	450. 3V 1000ms
27. S1:	340. 5V 1000ms
81>. S1:	59. 5Hz 100ms
81<. S1:	49. 3Hz 100ms
59. S2:	450. 3V 1000ms
27. S2:	340. 5V 1000ms
81>. S2:	59. 5Hz 100ms
81<. S2:	49. 3Hz 100ms

### 7.2.9 Restore Factory Setting

This function can restore calibration data and configuration parameters to default settings, as well as clear energy data and historical fault data. Restore factory settings is as follows:

Setting Info		1/2
1. Date & Time Setting		
2. COM Address Setting		
3. Language Setting		
4:BAT Setting		
5. Country Setting		
6. EPS Setting		
7. Priority Setting		
8. Auto Test Setting		
9. Restore Factory Setting		



Press ENTER key

Restore Factory Setting	
Energy Data:	Disable
Fault History:	Disable
Config Data:	Disable
OK	

▼ Press OK

Restore Factory Setting	
Energy Data:	Disable
Fault History:	Disable
Config Data:	Disable
OK	



Press UP/DOWN  
to clear Energy  
Data.

Restore Factory Setting	
Energy Data:	Enable
Fault History:	Disable
Config Data:	Disable
OK	

▼ Press OK

Restore Factory Setting	
Energy Data:	Disable
Fault History:	Disable
Config Data:	Disable
OK	



Press UP/DOWN  
enable or disable  
to clear Fault  
History.

Restore Factory Setting	
Energy Data:	Disable
Fault History:	Enable
Config Data:	Disable
OK	


▼ Press OK

Restore Factory Setting	
Energy Data:	Disable
Fault History:	Disable
Config Data:	Disable
OK	




Press UP/DOWN  
to restore Config  
Data


Restore Factory Setting	
Energy Data:	Disable
Fault History:	Disable
Config Data:	Enable
OK	

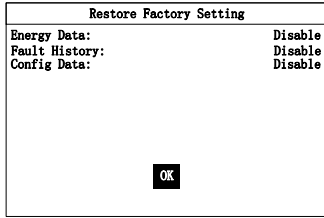

Press OK

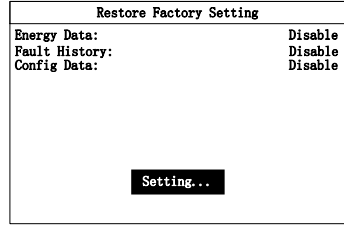


Wait for 10 seconds.

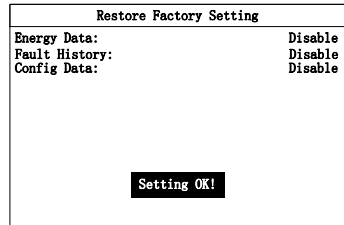


### 7.2.10 Anti-reflux Flow Settings


In the Meter Setting page, you can enable anti-reflux, select the CT, meter manufacturer, and set the power Limit. Settings:

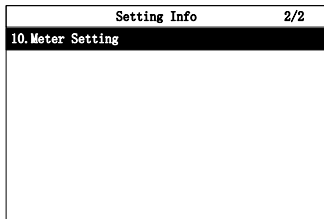


Press ENTER key

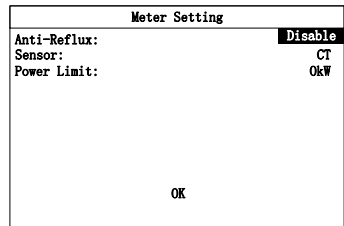

Press OK

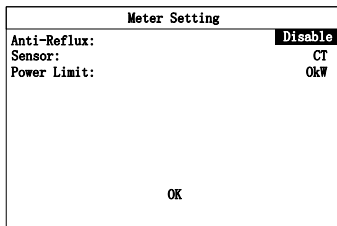

Press UP/DOWN  
to enable/disable  
Anti-Reflux

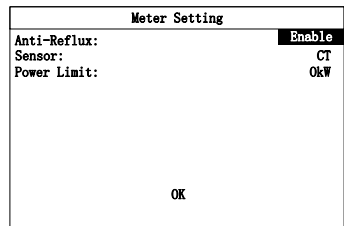

▼ Press OK

Meter Setting	
Anti-Reflux:	Enable
Sensor:	CT
Power Limit:	0kW
OK	



Press UP/DOWN to select CT or Meter Brand

Meter Setting	
Anti-Reflux:	Enable
Sensor:	YaDa
Power Limit:	0kW
OK	

▼ Press OK

Meter Setting	
Anti-Reflux:	Enable
Sensor:	ZhengTai
Power Limit:	0kW
OK	



Press UP/DOWN to set Power Limit.

Meter Setting	
Anti-Reflux:	Enable
Sensor:	ZhengTai
Power Limit:	-7kW
OK	

▼ Press OK

Meter Setting	
Anti-Reflux:	Enable
Sensor:	ZhengTai
Power Limit:	-7kW
OK	



Press OK

Meter Setting	
Anti-Reflux:	Enable
Sensor:	ZhengTai
Power Limit:	-7kW
Setting...	



Wait 3 seconds.

Meter Setting	
Anti-Reflux:	Enable
Sensor:	ZhengTai
Power Limit:	-7kW
Setting OK!	



### 7.2.11 Parallel Communication Setting

In parallel setting page we can set the inverter as master or slave:

Setting Info	2/2
10. Meter Setting	
11. Set Parallel Role	

▼ Press ENTER key

Set Parallel Role
Role: 1 Phase Master
OK



Press UP/DOWN  
to set Parallel or  
Slave

Set Parallel Role
Role: 2 Slave
OK

▼ Press OK

Set Parallel Role
Role: 1 Phase Master
OK



Press OK


Set Parallel Role
Role: 1 Phase Master
Setting...

▼ Wait 3 seconds

Set Parallel Role
Role: 1 Phase Master
Setting OK!

### 7.2.12 Set the on/off page

Enter the password 321 to enter the switch on/off page. The following page is displayed:

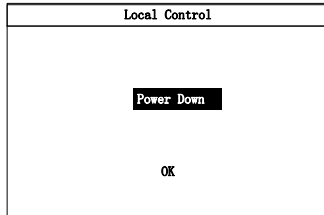

## Chapter 8 System Debugging

### 8.1 LCD Screen and Keys

#### 8.1.1 LCD Screen

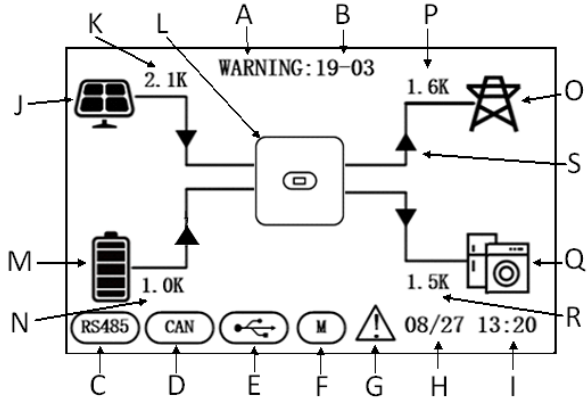


Fig. 8-1

Position	Description
A	State
B	Fault code
C	RS485 communication
D	CAN communication
E	USB port
F	Smart meter
G	Fault warning
H	Date
I	Time
J	PV input
K	PV power
L	Hybrid Inverter
M	Battery indicator (20% × 5 bars)

N	Battery power
O	Power grid
P	Grid power
Q	Critical load
R	Load power
S	Energy flow arrow

8.1.2 LEDs, Screen and Keys

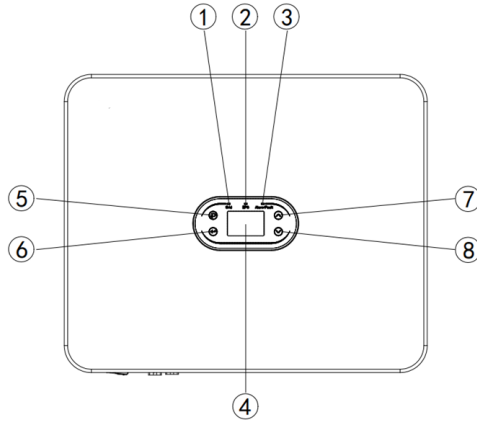


Fig. 8-2

Position	Description
1	Green LED remaining on: in the on-grid state.
	Green LED flashing: during the power-on self-test.
	Green and yellow LED flashing: during the programming process.
2	Yellow LED remaining on: in the off-grid state.
3	Red LED remaining on: in the fault state.
4	LCD screen
5	Return key
6	Enter key
7	Up key
8	Down key

## 8.2 Working Mode

### 8.2.1 Normal Mode

In normal mode, the inverter may work in on-grid state or off-grid state.

#### On-grid State

When the hybrid inverter works in on-grid state, you can select a priority mode as needed. On the LCD screen, you can only set one period for each priority mode; while on the App, you can set up to three period for each priority mode.

1. Load First: This is the default priority mode. When the system works in this mode, the PV energy will be provided to the load first. When the PV energy is not sufficient to meet the load need, the battery will begin to supply power. When the PV energy has fulfilled the load need, the excess power will be stored in the battery. If no battery is connected or the battery is already full, the excess power will be supplied to the grid (if anti-reflux protection is not enabled).

2. Bat First: when the system works in this mode, the battery will be charged first. To charge the battery by AC power, you need to enable the AC Charge function and set the time interval and battery SOC. If the AC Charge function is not enabled, the hybrid inverter will only charge the battery by PV energy. You can also set the discharge power (maximum discharge percentage of the battery). In Bat First mode, the actual discharge energy of the battery will not exceed the set percentage.

3. Grid First: When the system works in this mode, the PV energy will be supplied to the grid first. Users can export energy to the grid during peak hours. You need to set the time interval and battery SOC. You can also set the discharge power (maximum discharge percentage of the battery). In Grid First mode, the actual discharge energy of the battery will not exceed the set percentage.

#### Off-grid State

In case of grid power failure, the system will automatically get into the off-grid state (you can disable this function as instructed in Section 9.1).

In this state, the system will output voltage via the EPS port and power the load by the battery and solar PV panel. Please note that the load power at the EPS port should not exceed the maximum output power (12,000W) of the inverter.

Note:

1. In Grid First mode or Bat First mode, you can only set one period on the LCD screen. If you need to set more periods, please use Solarman App.

2. To charge the battery by AC power, you need to enter your login password and then enable the AC Charge function.

### 8.2.2 Fault State

The hybrid inverter has an intelligent control system that can continuously monitor and adjust the state of the

system. In case of a system fault or device fault, the fault information will be displayed on the LCD screen and the corresponding LED will be turned on.

Note:

- A) See Section 10.1 for more fault information.
- B) Some of the fault information is intended to remind you of possible internal faults of the inverter.

### 8.2.3 Firmware Upgrade

Do not turn off the power during the firmware upgrade progress. The system will automatically proceed to working mode at the end of firmware upgrade.

### 8.2.4 Self-test State

Before activating the working mode, the system will get into the power-on self-test state. If no fault is detected, the system will proceed to working mode; otherwise, it will get into the fault state.

### 8.2.5 Standby State

When no fault is detected and a certain operating condition has not been met, the system will get into the standby state.

### 8.2.6 Power-off State

To stop the operation of the hybrid inverter, please disconnect all energy sources to enter automatic shutdown.

Below are the shutdown steps:

1. Shut down via the LCD screen setting.
2. Disconnect the PV side.
3. Turn off the BAT switch.
4. Disconnect the power grid. Both the LED light and LCD screen will be turned off.

Note: At the end of the above steps, please wait at least 5 minutes before proceeding to other operations.

<b>NOTE</b>
At the end of the above steps, please wait at least 5 minutes before proceeding to other operations.

## 8.3 Setting Parameters in Solarman App

Note: To ensure normal operation of the inverter, use Solarman App to set the parameters of the hybrid inverter first.

**NOTE**

To ensure normal operation of the inverter, please use Solarman App to set the parameters of the hybrid inverter first.

Solarman is a mobile App that can communicate with the hybrid inverter via Wi-Fi or GPRS. It allows you to:

1. Check the running data, software version and fault information of the inverter.
2. Set the grid parameters and communication parameters of the inverter.
3. Perform maintenance of the inverter.
4. Update the software version of the inverter.

For more details, please see the "Solarman APP User Manual".

## Chapter 9 System Maintenance

The hybrid inverter has undergone a series of tests before delivery. To maintain and extend the service life of the inverter, you need to perform necessary routine maintenance in addition to using it in strict accordance with this Manual.

Make sure the inverter is disconnected from the power supply.
To operate the inverter, please wear personal protective equipment.

### 9.1 Regular Maintenance of Inverter

Maintenance Item	Process	Interval
Saving the inverter's running data	Use the monitoring software to read the inverter data in real time, and back up the recorded data periodically. Save the running data, parameters and logs of the inverter recorded by the monitoring software to a file. Check the monitoring software and view the parameter settings of the inverter through the hand-held device.	Every quarter
Inverter Running condition of the inverter	Observe whether the inverter is installed securely, damaged or deformed. Check if there is any abnormal sound during operation. Check the variables when the system is running in on-grid state. Check whether the heating of the inverter housing is normal, and use the thermal imager to monitor the heating of the system.	Every six months
Cleaning the inverter	Check the ambient humidity and dust around the inverter. If they affect the heat dissipation of the inverter, shut down the inverter and turn off the power supply, and clean the inverter with a soft brush or dry cloth after it cools down.	Every six months
DC switch	Check whether the DC switch functions properly by turning it on and off 10 times consecutively.	Every year
Electrical connection	Check whether the cable connections and the terminals of the inverter become loose. Check the cables for damage, especially whether there are any cuts on the cable sheath that may come in contact with metal surface.	Every six months
Sealing	Check whether the sealing of the cable holes meets the requirements. If any cable hole is not sealed or shows a large sealing gap, re-seal it.	Every year
Safety function	Check the LCD screen and the system shutdown function. Simulate a shutdown and check the shutdown signal communication. Check the warning labels and replace them if necessary.	Every year



## 9.2 Powering Off the Inverter

**DANGER**

- To perform maintenance of the inverter, please power off the inverter first so as to avoid damage to the inverter and avoid the risk of electric shock.
- When the inverter is powered off, it will take time for the internal components to discharge. Please wait for the time period specified on the label until the inverter is fully discharged.

Step 1: Disconnect the on-grid AC circuit breaker of the inverter.

Step 2: Disconnect the back-up AC circuit breaker of the inverter.

Step 3: Disconnect the EPS circuit breaker between the inverter and battery.

## 9.3 Removing the Inverter

Step 1: Disconnect all electrical connections of the inverter, including the DC wire, AC wire, communication cable, communication module and grounding wire.

Step 2: Remove the inverter from the mounting bracket.

Step 3: Remove the mounting bracket.


Step 4: Keep the inverter properly for future use, according to the storage environment requirements.

## 9.4 Scrapping the Inverter

If the inverter cannot be used any longer, dispose of the inverter according to the electrical waste disposal requirements of the laws and regulations of your country/region. Do not dispose of the inverter as household waste.

## Chapter 10 Troubleshooting

### Fault Codes and Troubleshooting

 <p><b>WARNI NG</b></p>	<p>If you are not professional at troubleshooting, contact your dealer for help. Please wear personal protective equipment and power off the inverter before troubleshooting!</p>
--	---

This Chapter lists the faults by a list of fault codes, so that you can find troubleshooting actions quickly.

You can use the following methods to do troubleshooting. If they cannot help you, contact our After-sales Service Center.

Please provide the following information to our After-sales Service Center so that we can help you more quickly.

- Model No. of the inverter: \_\_\_\_\_;
  - SN of the inverter: \_\_\_\_\_;
  - System version of the inverter — version 1: \_\_\_\_\_;  
— Version 2: \_\_\_\_\_;
  - MCU software version: \_\_\_\_\_;
  - Fault code: \_\_\_\_\_;
  - Installation environment of the inverter: \_\_\_\_\_;
- Description of fault: \_\_\_\_\_.

Table 10-1 Fault Codes of Inverter

No.	Fault Type	Fault Code	Fault Information	Actions
1	PV voltage error	01-01	Low PV voltage	Check whether the PV panel is connected properly, damaged, covered with dust, or blocked by any objects.
		01-02	High PV voltage	Check whether the PV panel is connected properly, and whether the PV voltage is higher than the maximum working voltage of the inverter.
		01-03	Short circuit of PV panel	Check whether the PV panel is short-circuited.
2	Bus voltage error	03-01	Low Bus voltage	This fault usually occurs in the early morning. Please check the cleanliness of the PV panel surface.
		03-02	High Bus voltage	Check whether the PV panel is connected properly, and whether the PV voltage is higher than the maximum working voltage of the inverter.
		03-04	Over-voltage of hardware Bus	Restart the inverter. If the fault still exists, contact your dealer.
3	Over-current	05-01	Over-current of inverter hardware	Restart the inverter. If the fault still exists, contact your dealer.
		05-02	Over-current of inverter software	
		05-03	Over-current of boost hardware	
		05-04	Over-current of boost software	
		05-05	Auxiliary power hardware TZ failure	
		05-06	TZ Over-voltage of Bus hardware	
		05-07	Hardware TZ failure at LLC side	
		05-08	Over-current of buck-boost software	
4	Temperature error	06-01	Abnormal inverter temperature	Check the inverter temperature. If the temperature is too high, cool the inverter down before use.
		06-02	Abnormal Boost temperature	

No.	Fault Type	Fault Code	Fault Information	Actions
		06-03	Abnormal radiator temperature	
		06-04	Abnormal ambient temperature	
		06-05	Abnormal buck-boost temperature	
		06-06	Open circuit of NTC thermistor	
5	Insulation monitoring error	07-01	Insulation monitoring error	Check whether the inverter and PV panel are grounded reliably. Power off the inverter for 5 minutes and then power it on again. If the fault still exists, contact your dealer.
6	Driver error	08-01	Driver error	Restart the inverter. If the fault still exists, contact your dealer.
7	Communication error	09-01	Communication error from ARM to master DSP	Restart the inverter. If the fault still exists, contact your dealer.
		09-02	Communication error from master DSP to ARM	
		09-03	Communication error from ARM to slave DSP	
		09-04	Communication error from slave DSP to ARM	
		09-05	Communication error between master and slave chips - master chip failure	Restart the inverter. If the fault still exists, contact your dealer.
		09-06	Communication error between master and slave chips - slave chip failure	Restart the inverter. If the fault still exists, contact your dealer.
		09-07	Communication error between DSP and AFCI	Restart the inverter. If the fault still exists, contact your dealer.

No.	Fault Type	Fault Code	Fault Information	Actions
8	Leakage current error	10-01	High static leakage current	1. If the fault occurs occasionally, it may be caused by accidental abnormality of external cables. You can restart the inverter to resume normal operation. 2. If the fault occurs frequently or lasts long, check whether the PV string is grounded reliably.
		10-02	Abrupt fault of 30mA	
		10-03	Abrupt fault of 60mA	
		10-04	Abrupt fault of 150mA	
9	Relay failure	11-01	Open circuit of relay	Restart the inverter. If the fault still exists, contact your dealer.
		11-02	Short circuit of relay	
10	Internal fan failure	12-01	Internal fan failure	Restart the inverter. If the fault still exists, contact your dealer.
11	DCI error	14-01	DCI error of R-phase	Check whether the inverter and PV panel are grounded reliably. Power off the inverter for 5 minutes and then power it on again. If the fault still exists, contact your dealer.
12	Consistency error	19-01	Inconsistent AC voltage values	Restart the inverter. If the fault still exists, contact your dealer.
		19-02	Inconsistent Bus voltage values	
		19-03	Inconsistent ISO voltage values	
		19-04	Inconsistent PV voltage values	
		19-05	Inconsistent GFCI	
		19-06	Bus voltage sampling error	
		19-07	PV current sampling error	
13	AC voltage error	31-01	Level-1 under-voltage of AC power	1. If the fault occurs occasionally, it may be caused by momentary abnormality of the power grid. The inverter will resume normal operation when the power grid gets back to normal. 2. If the fault occurs frequently, check whether the power grid is connected properly.
		31-02	Level-1 over-voltage of AC power	

No.	Fault Type	Fault Code	Fault Information	Actions
		31-03	No AC voltage	<p>Check whether the AC power is connected properly.</p> <p>1. If the fault occurs occasionally, it may be caused by momentary abnormality of the power grid. The inverter will resume normal operation when the power grid gets back to normal.</p> <p>2. If the fault occurs frequently, check whether the power grid is connected properly.</p>
		31-04	Level-2 under-voltage of AC power	
		31-05	Level-2 over-voltage of AC power	
		31-06	Startup under-voltage of AC power	
		31-07	Startup over-voltage of AC power	
		31-08	Transient over-voltage of interruptions	
		31-09	Anti-islanding over-voltage	
		31-10	Oscillation of grid voltage	
14	AC frequency error	33-01	Level-1 under-frequency of AC power	<p>1. If the fault occurs occasionally, it may be caused by momentary abnormality of the power grid. The inverter will resume normal operation when the power grid gets back to normal.</p> <p>2. If the fault occurs frequently, check whether the power grid is connected properly.</p>
		33-02	Level-1 over-frequency of AC power	
		33-03	Level-2 under-frequency of AC power	
		33-04	Level-2 over-frequency of AC power	
		33-05	Startup under-frequency of AC power	
		33-06	Startup over-frequency of AC power	
15	Remote shutdown	37-01	Remote shutdown instruction	Check whether any one is trying to shut down the inverter remotely.

No.	Fault Type	Fault Code	Fault Information	Actions
16	AFCI error	38-01	Failure of PV string 1	Please turn off the inverter and open the input and output switches, and turn on the inverter again 5 minutes later. If the fault still exists, contact your dealer.
		38-02	Failure of PV string 2	
17	Power-on self-test error of AFCI	39-01	Power-on self-test error of PV string 1	Please turn off the inverter and open the input and output switches, and turn on the inverter again 5 minutes later. If the fault still exists, contact your dealer.
		39-02	Power-on self-test error of PV string 2	
18	AutoTest failure	41-01	AutoTest failure	Please turn off the inverter and open the input and output switches, and turn on the inverter again 5 minutes later. If the fault still exists, contact your dealer.
19	N-PE fault	42-01	N-PE voltage error	Check whether the AC wires are connected properly and reliably to the inverter.
20	Power-on self-test error of leakage current	43-01	Leakage current sensor failure	Please turn off the inverter and open the input and output switches, and turn on the inverter again 5 minutes later. If the fault still exists, contact your dealer.
21	PV string detection error	44-01	PV string failure	Please turn off the inverter and open the input and output switches, and turn on the inverter again 5 minutes later. If the fault still exists, contact your dealer.
22	Auxiliary power error	45-01	Auxiliary power failure	Please turn off the inverter and open the input and output switches, and turn on the inverter again 5 minutes later. If the fault still exists, contact your dealer.
23	Short circuit of EPS	46-01	Short circuit of EPS	Check whether the output wiring is correct at the EPS port.

Table 10-2 Warning Codes of Inverter

No.	Fault Type	Fault Code	Fault Information	Displayed Information
1	Low fan speed	01-07	Internal fan 1	Please turn off the inverter and open the input and output switches, and turn on the inverter again 5 minutes later. If the fault still exists, contact your dealer.
2	Communication of anti-reflux meter	04-01	Meter failure	Check whether the smart meter is connected properly and supplies power normally.
		04-08	Communication error of meter	Check whether the smart meter is connected properly and supplies power normally.
		04-16	CT cable error	Check whether the CT cable is connected properly.
3	Out-of-range grid voltage	05-00	Out-of-range voltage	<p>1. If the fault occurs occasionally, it may be caused by momentary abnormality of the power grid. The inverter will resume normal operation when the power grid gets back to normal.</p> <p>2. If the fault occurs frequently, check whether the power grid is connected properly.</p>
4	Short circuit of PV	06-01	Short circuit of PV1	Check whether the PV input is normal and whether the circuit is short.
		06-02	Short circuit of PV2	
5	Overload	07-01	EPS overload	Reduce the load at the EPS port.
6	Full battery	46-01	Full battery	The battery is fully charged.
7	Low battery voltage	47-01	The battery needs to be charged.	Please charge the battery soon.
		47-02	The battery can only be charged.	Check the mode settings and charge the battery.



## Chapter 11 Product Specifications

Model	XD5KTR	XD6KTR	XD8KTR	XD10KTR	XD12KTR
<b>Input parameters (DC)</b>					
Maximum input voltage (V)	1100				
Maximum MPPT current (A)	20				
Maximum MPPT short-circuit current (A)	40				
Start-up voltage (V)	160				
MPPT voltage (V)	150-1000				
Number of MPPT channels	2				
Number of strings per MPPT	1				
<b>Battery parameters (DC)</b>					
Battery type	Lithium/Lead-acid				
Battery voltage (V)	120-600				
Maximum charge and discharge current (A)	50				
Battery communication	CAN/485				
<b>Output parameters (AC)</b>					
Rated output power (W)	5000	6000	8000	10000	12000
Maximum input power (W)	5500	6600	8800	11000	13200
Rated voltage (V)	3/N/PE, 380/400				
Rated grid frequency (Hz)	50/60				
Maximum output current (A)	8.3	10	13.3	16.7	20
Power factor	0.8 lead ~ 0.8 lag				
Total current harmonic distortion	<3% (rated power)				
<b>Input parameters (AC)</b>					
Maximum input power (W)	7500	9000	12000	15000	18000
Maximum input current (A)	11.4	13.6	18.2	22.7	27.3
Rated voltage (V)	3/N/PE, 380/400				
Rated grid frequency (Hz)	50/60				
<b>Off-grid parameters (AC)</b>					
Rated output power (W)	5000	6000	8000	10000	12000

Maximum input power (W)	5500	6600	8800	11000	13200
Rated voltage (V)	3/N/PE,380/400				
Rated grid frequency (Hz)	50/60				
Peak power (W,s)	10000,60	12000,60	15000,60	15000,60	15000,60
Switching time (ms)	<20				
Maximum output current (A)	8.3	10	13.3	16.7	20
THDv (linear load)	<2% (rated power)				
<b>Efficiency</b>					
Maximum efficiency	>98.2%	>98.2%	>98.2%	>98.4%	>98.4%
European efficiency	>97.6%	>97.6%	>97.6%	>97.8%	>97.8%
Charge-discharge efficiency	>97.6%	>97.6%	>97.6%	>97.8%	>97.8%
<b>Protection features</b>					
DC switch	Available				
Anti-islanding protection	Available				
Output overcurrent protection	Available				
PV/Battery reverse connection protection	Available				
IV curve scanning	Available				
DC surge protection	Level II				
AC surge protection	Level II				
Insulation resistance detection	Available				
AC leak current detection	Available				
Arc fault detection	Optional				
<b>Display and communication</b>					
Display	LCD/ APP				
RS485	Supported				
CAN	Supported				
WIFI/4G/LAN	Supported				
Bluetooth	Supported				
<b>General Specifications</b>					
Dimensions (W × H × D)	534*440*232mm				
Weight	27kg				
Operating temperature range	-30°C~+60°C				
Cooling mode	Natural cooling				

Maximum operating altitude	4000m
RH	0~100%
Ingress protection	IP66
Noise (dB)	<35dB
Topology	Non-isolated
Grid standard	G98/G99, VDE-AR-N 4105/VDE V0124, EN 50549-1, VDE 0126/UTE C 15/VFR:2019RD 1699/RD 244/UNE206006/UNE 206007-1, CEI0-21.C10/11, NRS 097-2-1, TOR, EIFS 2018.2, IEC 62116, IEC 1727, IEC 60068IEC 61683EN 50530, MEA, PEA
Safety/EMC standard	IEC 62109-1/-2,EN 61000-6-1/-3



Hotline: +86 400 700 9997    E-mail: [solar-service@invt.com.cn](mailto:solar-service@invt.com.cn)    Website: [www.invt-solar.com](http://www.invt-solar.com)

---

INVT Solar Technology (Shenzhen) Co., Ltd.

2<sup>th</sup> Floor, Block B, INVT Guangming Technology

Building, Songbai Road, Matian, Guangming District, Shenzhen, China

This Manual is subject to change without prior notice due to product improvements. All rights reserved. Reproduction is prohibited without prior written permission.

2024.2.27(V1.0)